



How to replace KVM PCB

1. remove the screw x 6 from the rear cover

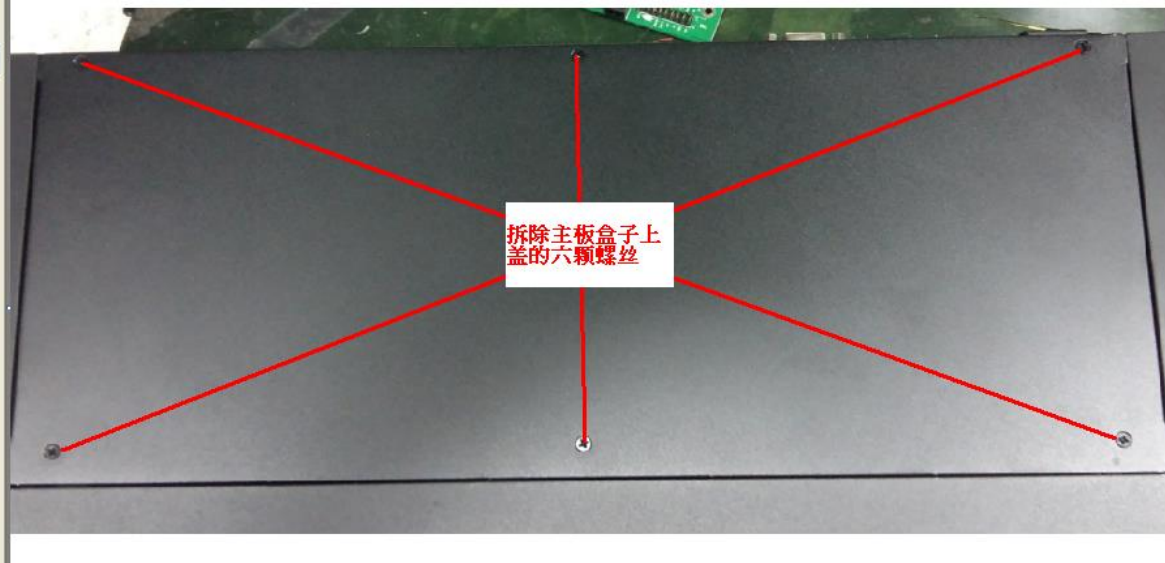


2. Remove the copper studs from the 1st, 3rd, 5th, 7th, 9th terminal.

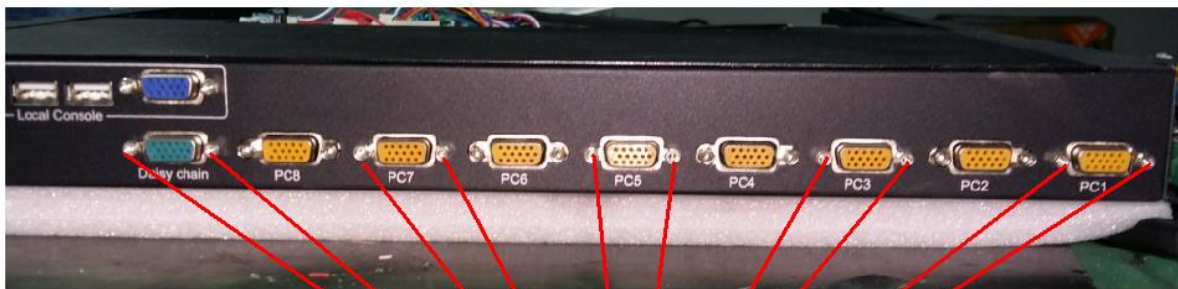


拆除1, 3, 5, 7, 9端口上的铜柱

3. Remove the screws x 7 from the main board

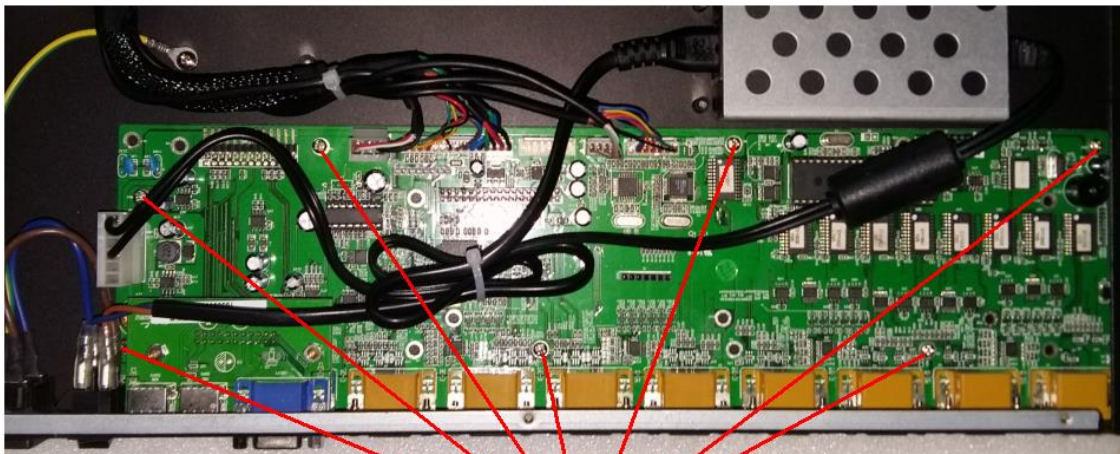

拆除主板正面七颗螺丝

4. Unplug the selected terminal one by one and plug in to the new main board.

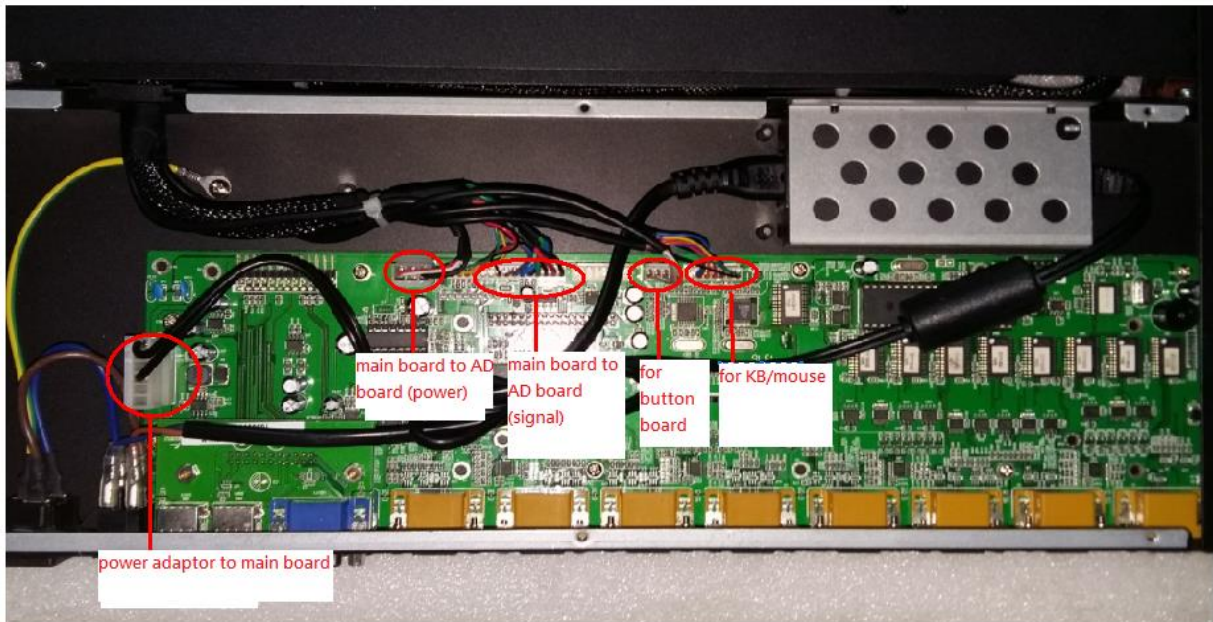

5. based on step 3 2 1 to screw back the main board, copper studs and rear cover.