


# How to replace Main Cable



Model: AVP117e-220DC

## 1. Definition of Main Cable

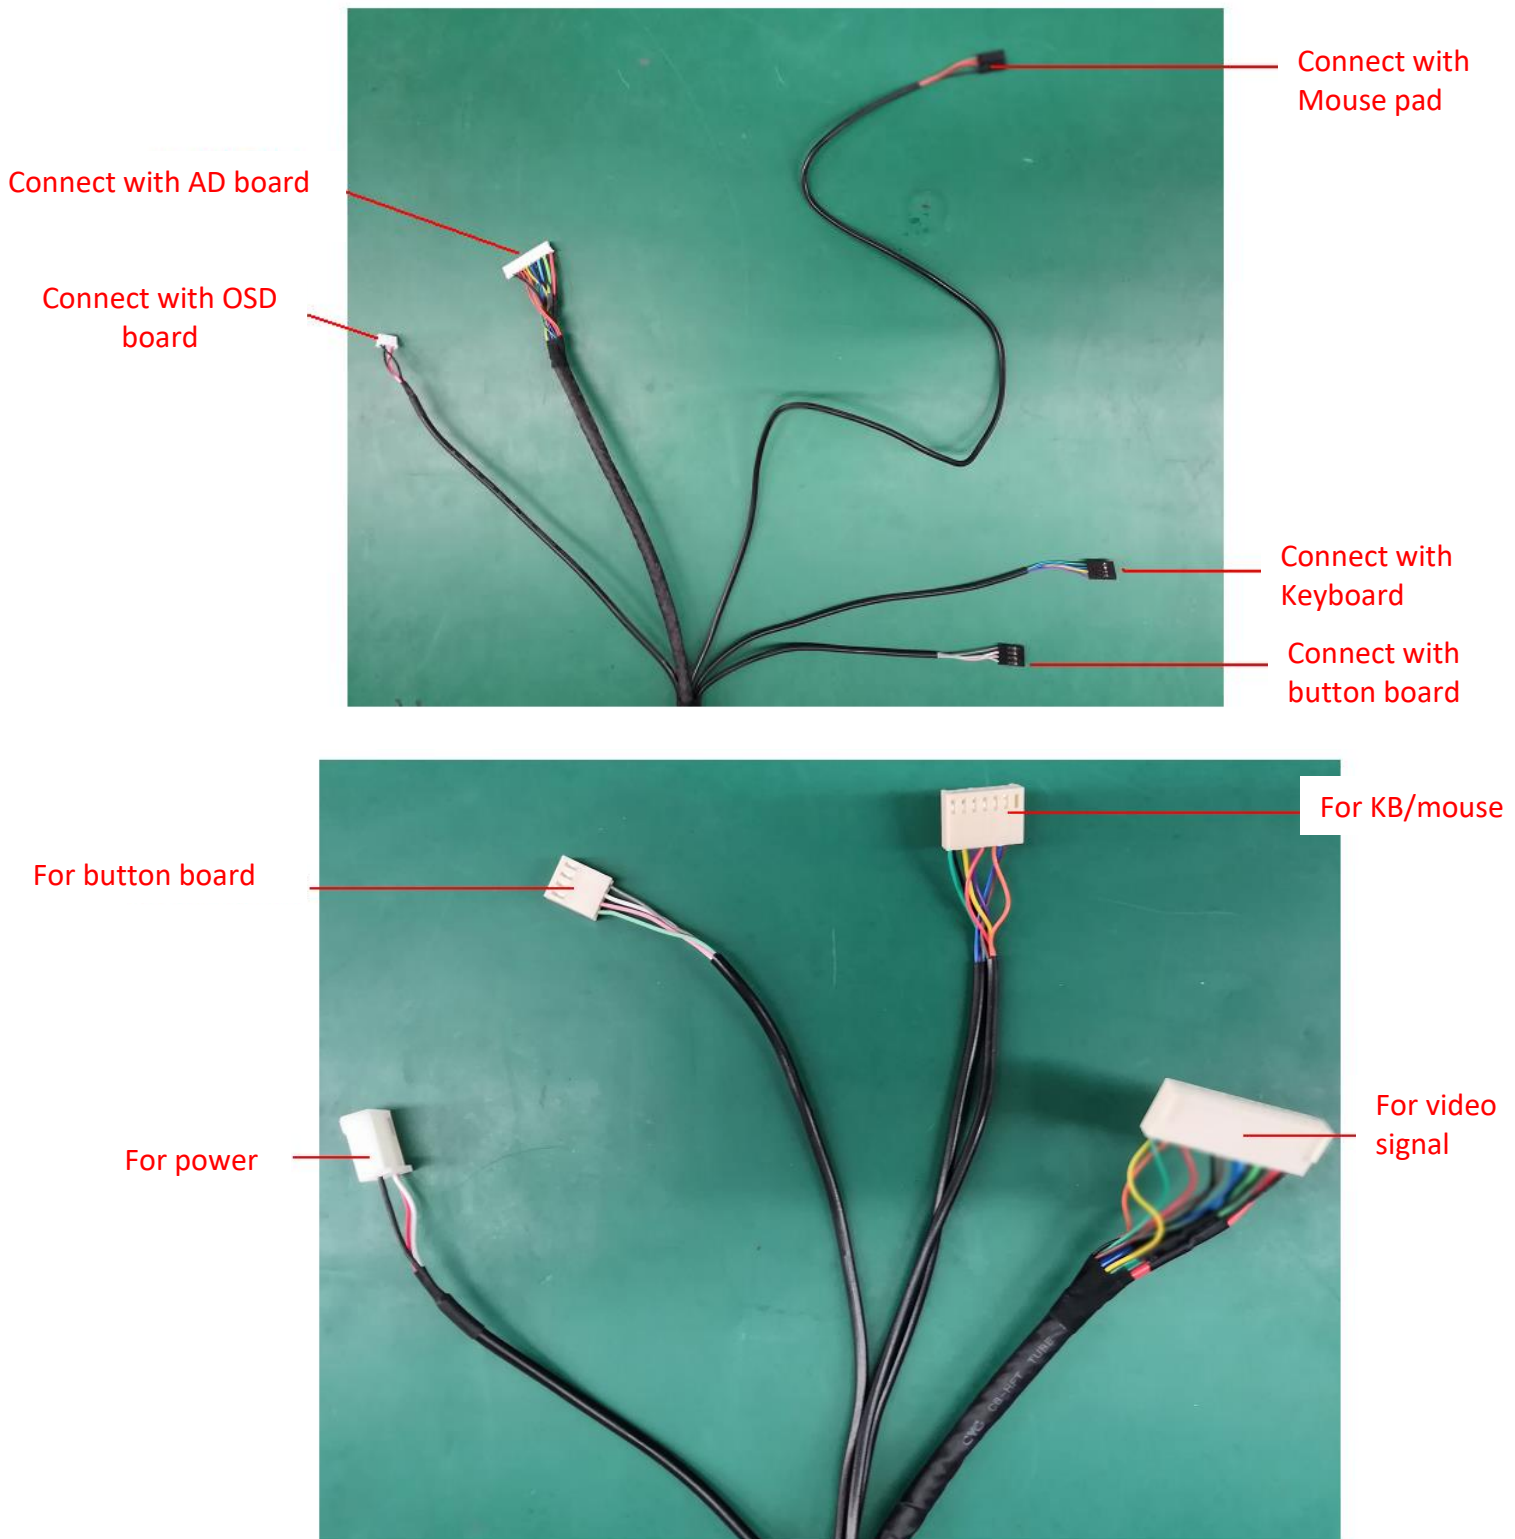

2. To open the cover

- a. Follow photos below, release the screws - rear cover 10 pcs, hinge cover 4 pcs, LCD module 6 pcs

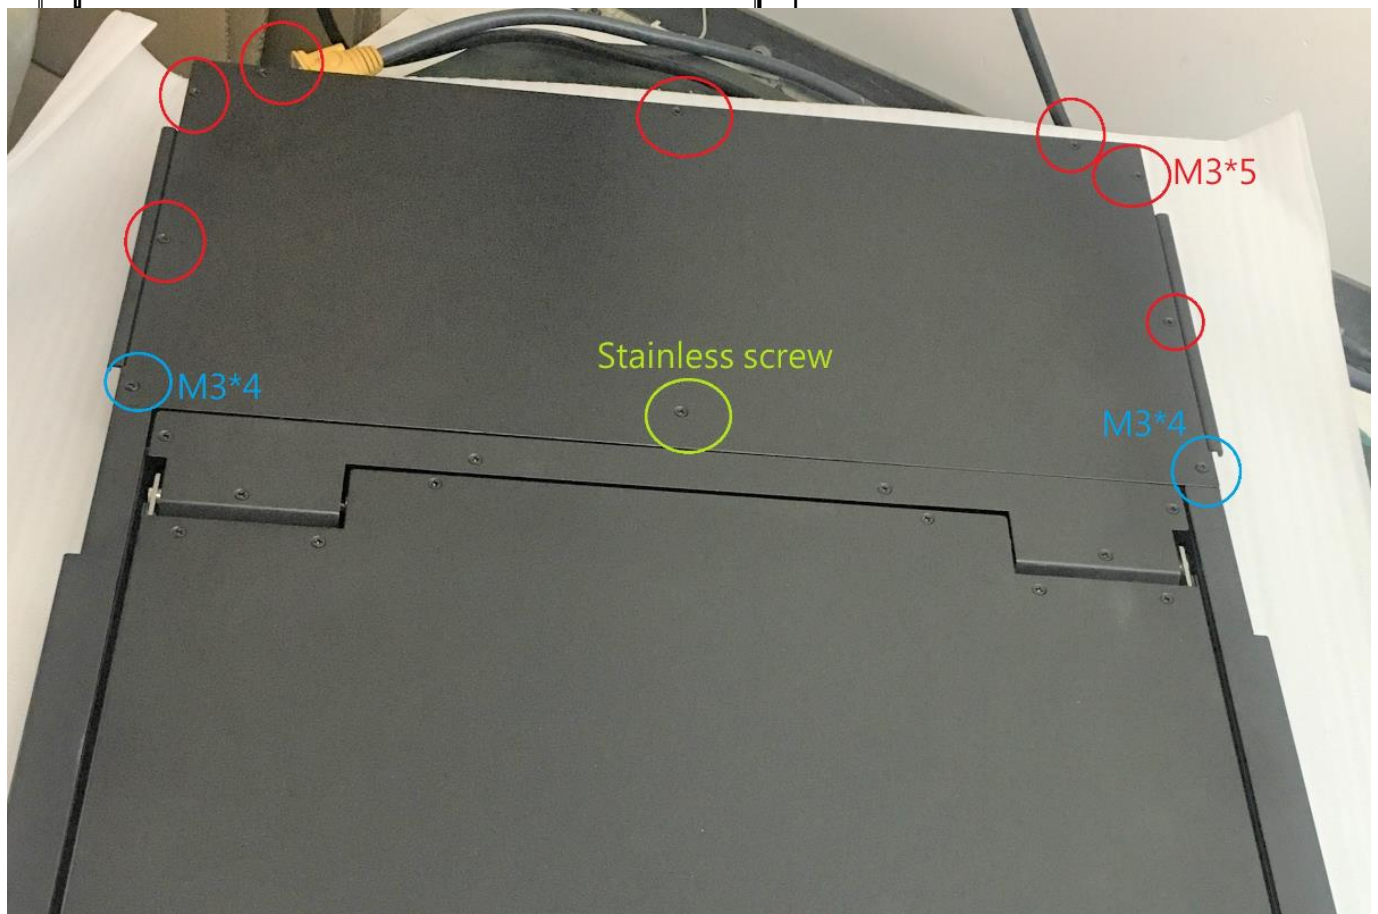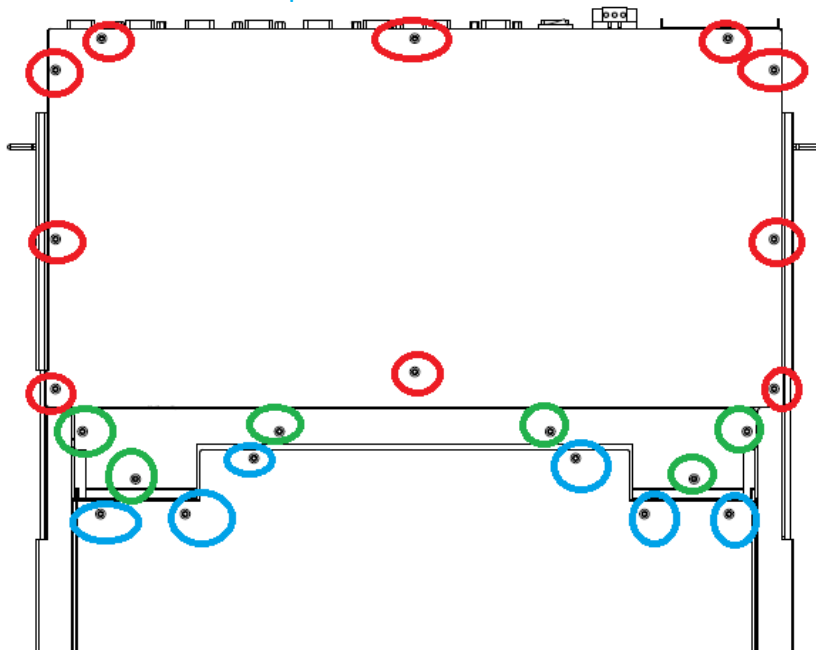


- b. Follow photos below, release the screws on the side of LCD module – 3pcs each side.



Release screw x 3

3. To open the keyboard cover




- a. Follow photos below, release the screws x 6

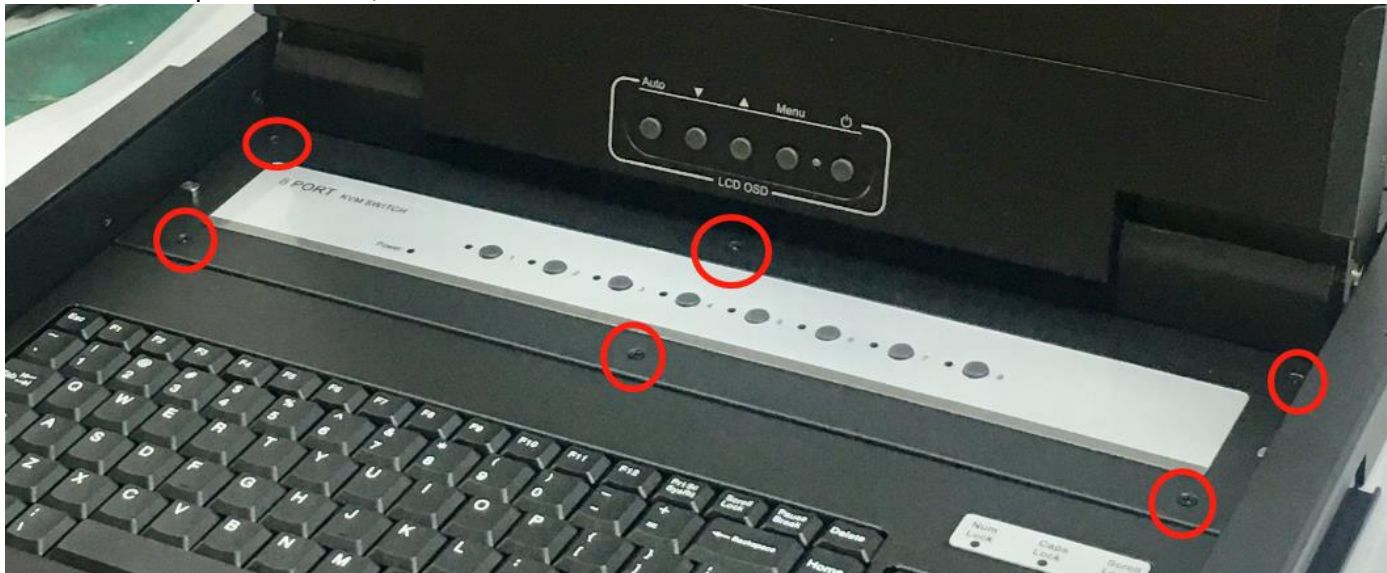

b. Remove screw x 3



4. There is total 4 covers should be removed
  - a. (Please pay attention when removing the keyboard cover, because there is cable connecting)

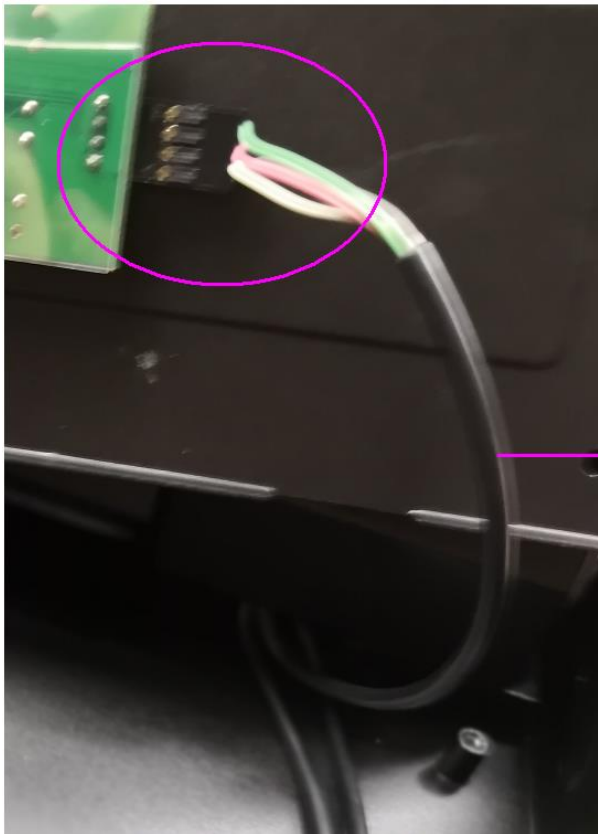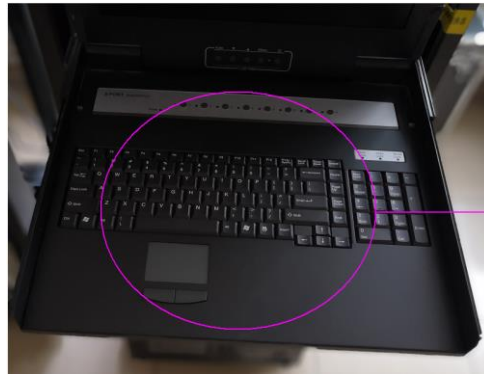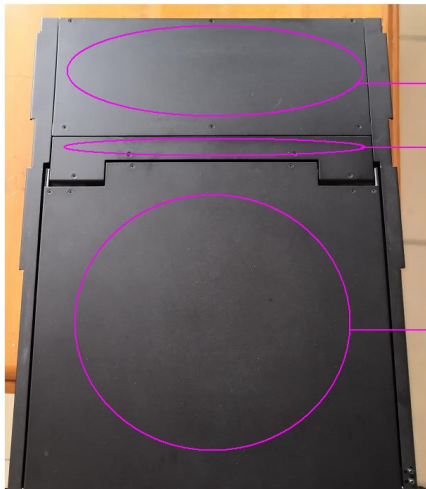

Please pay attention when removing the keyboard cover, because there is cable connecting



**b.** Pay attention and try not to move two silver buttons both sides.



Please try not to touch this button




If the button falls off unfortunately, this is the correct way to put it back

## 5. Change the Main Cable

Follow the original connecting, replace the cables.

### a. Main board

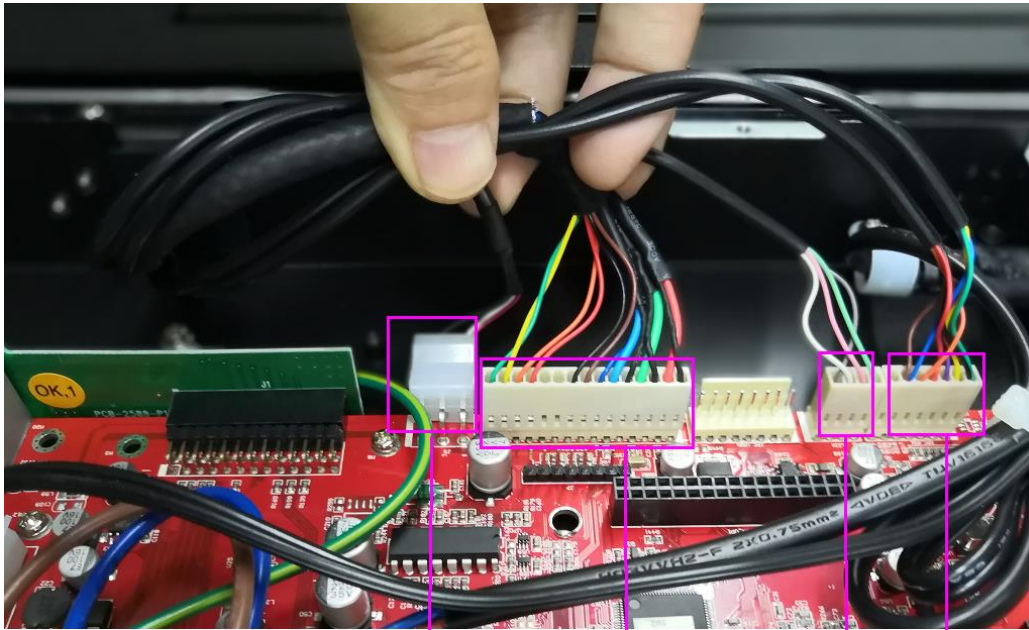


Power

video signal

button board

KB/mouse


### b. AD board & OSD board

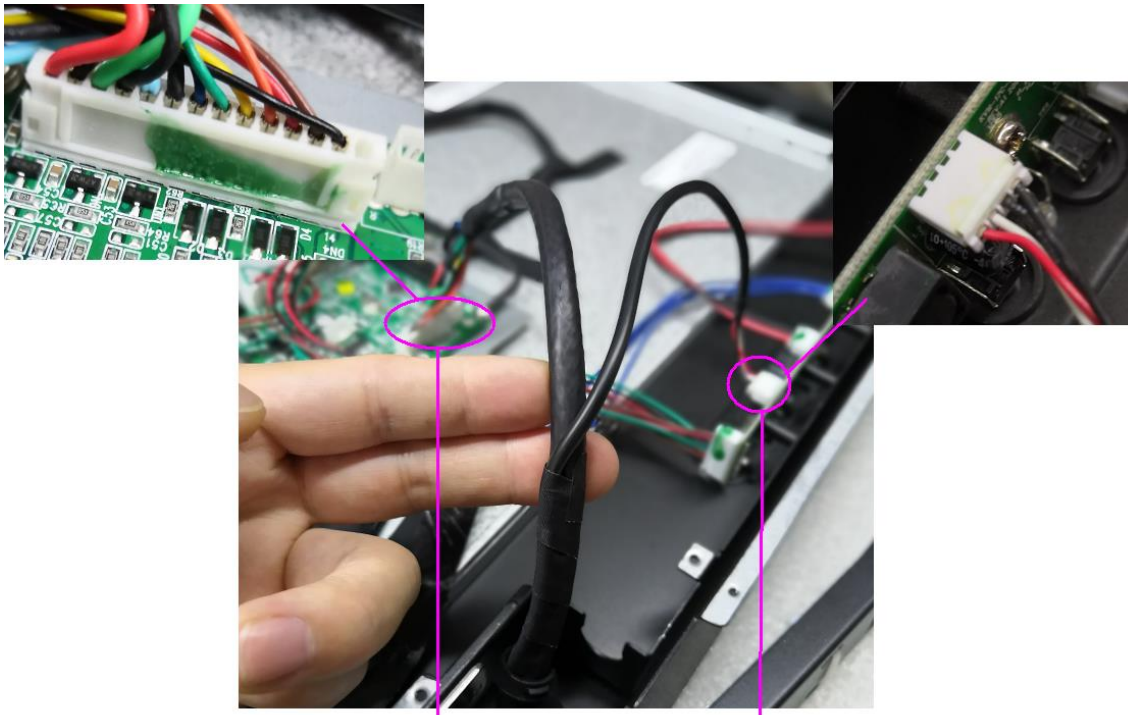

AD board


OSD board

### c. Keyboard & mouse

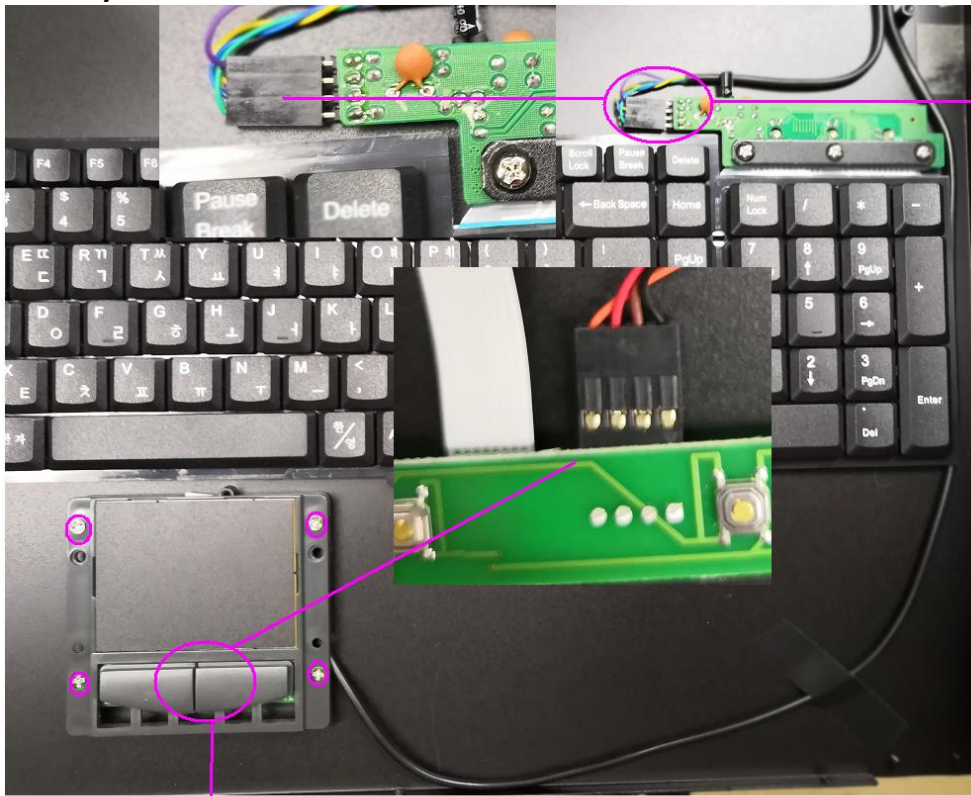



Release screw x 4, and then replace the new cable

### d. KVM button board

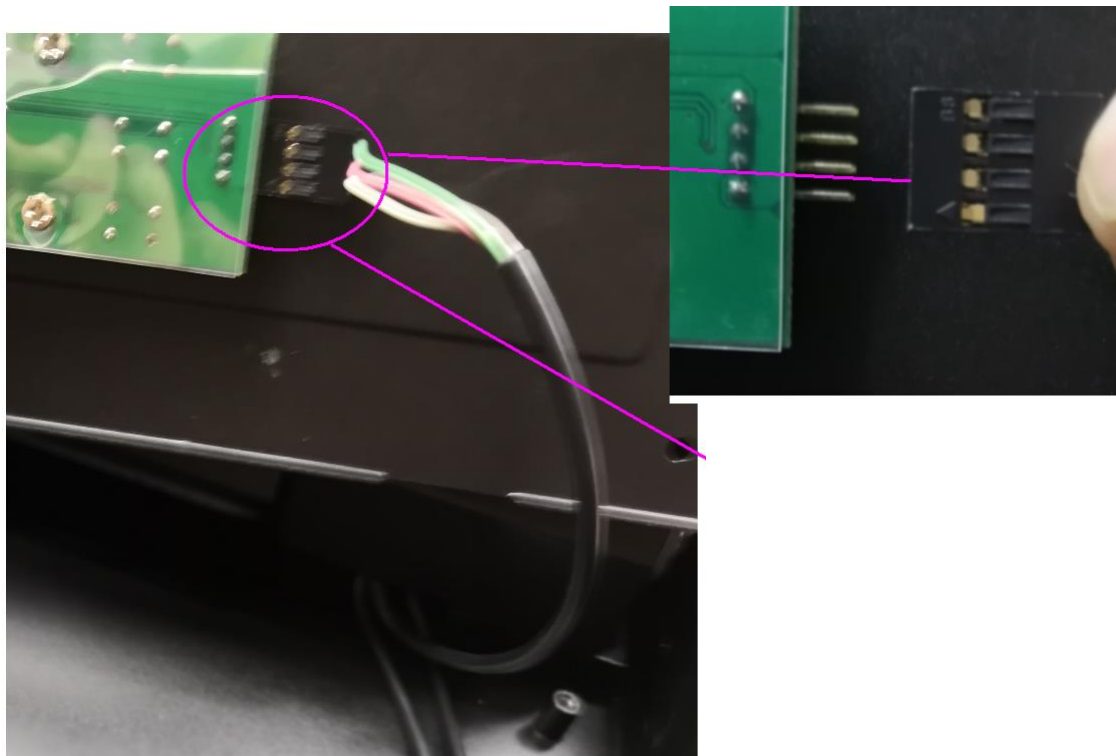



## 6. Stabilize the main cable with cable guide

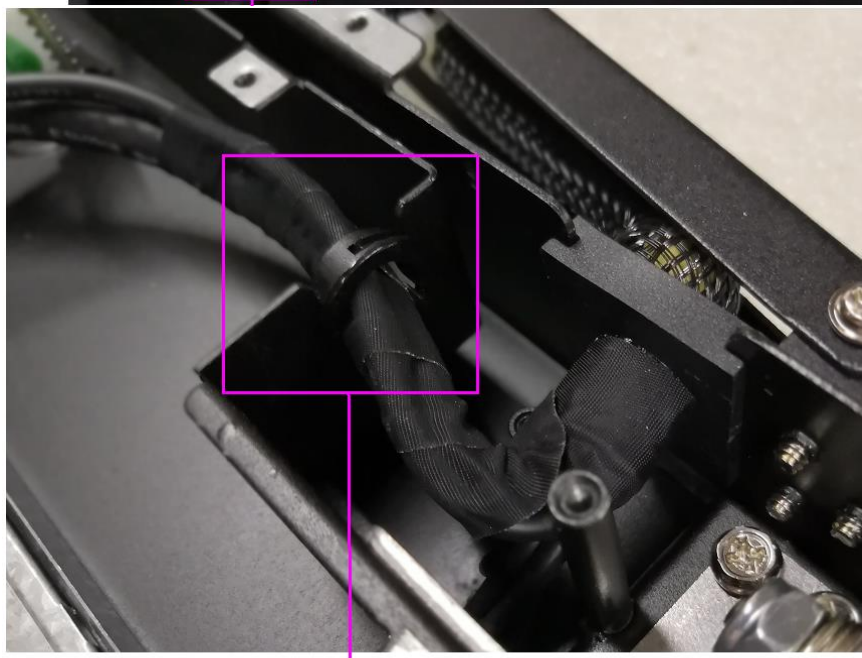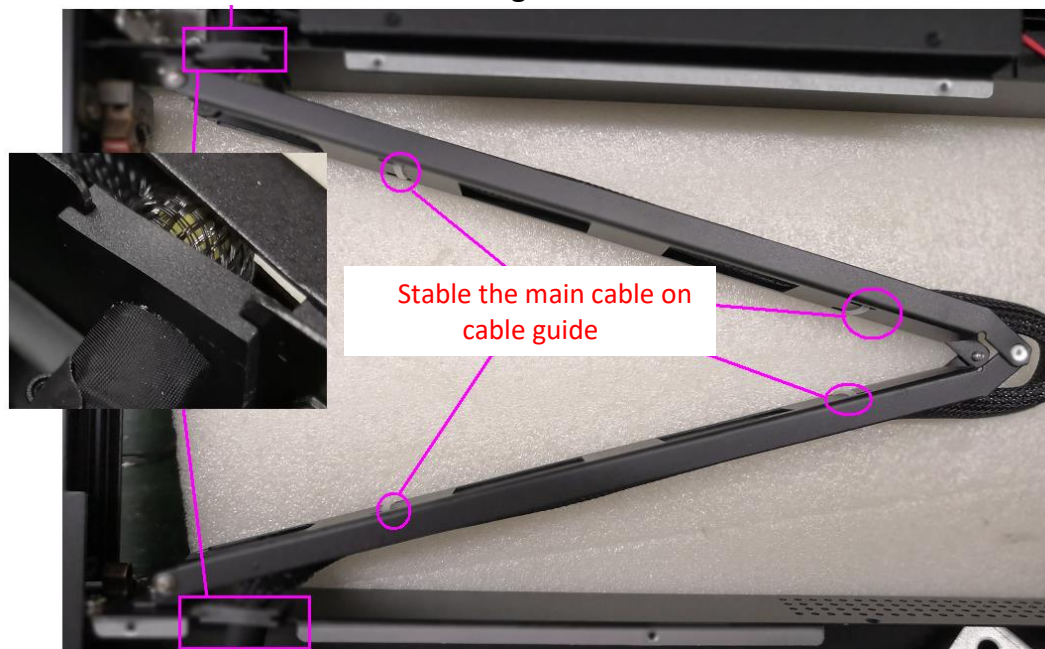

Buckle for AD board cable & OSD cable