

# AVP/ASK/ANP OSD Menu

## LCD OSD Menu Setup

### OSD Control buttons

LCD OSD can establish and setup LCD display. Setup instructions of four buttons are as follows:

Button	Functions
POWER	Turn on or off the LCD Display
MENU	Activate OSD menu, select a menu and press MENU key to confirm the selection and enter the submenu.
▲	Press this key to increase setting or scroll up the menu bar
▼	Press this key to Decrease setting or scroll down the menu bar
Auto/Source	press to seletion video input

### OSD Key Lock

LCD OSD can be lock/unlock through compound key command:

To disable the OSD key, press ▼ and MENU together, key lock on

To enable the OSD key, press ▼ and MENU together, key lock off