



Windows 2000/XP Driver Installation Instructions

DO NOT CONNECT THE USB CONNECTOR TO YOUR COMPUTER UNTIL ADVISED.

1. Insert the driver CD in the CD-Rom drive.
2. Select "Open folder to view..." and click OK.

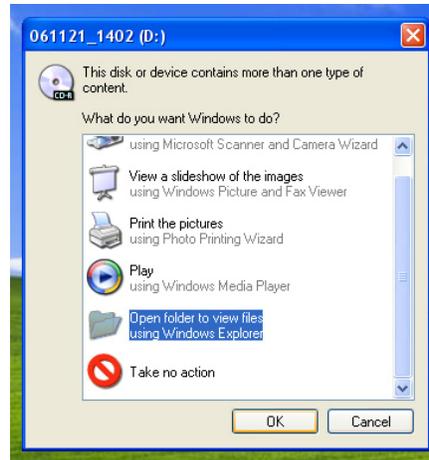


3. Double click the Win2000XP folder icon.

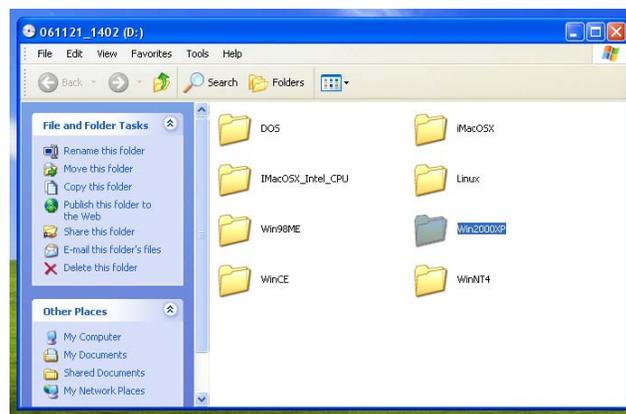


4. Double click on the Setup program icon.



5. Welcome to Touchkit setup window will appear; click next to continue.

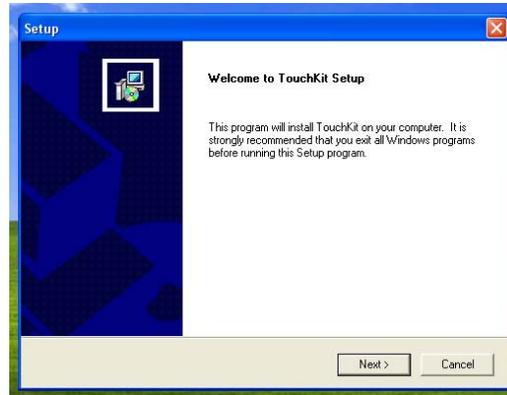

6. A setup menu will appear, DO NOT SELECT: "Install P/S 2 interface Driver..."

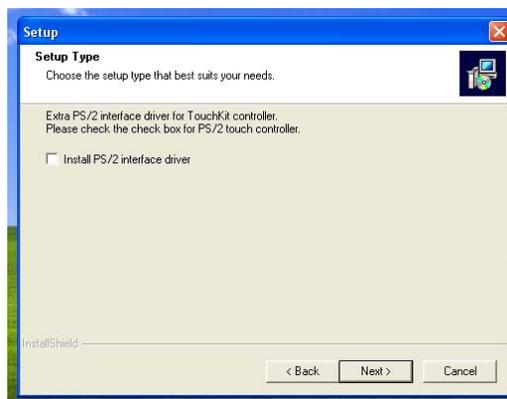

7. Click next to continue.

8. Setup type window will appear; click next to continue.



9. Information window will appear to plug in the USB controller.




10. Plug in the USB controller.
11. "Found new hardware wizard..." window will appear.




12. Click "Cancel" to close window.
13. Click "OK" in the information window.




14. Setup window will re-appear with support multi-monitor screen.

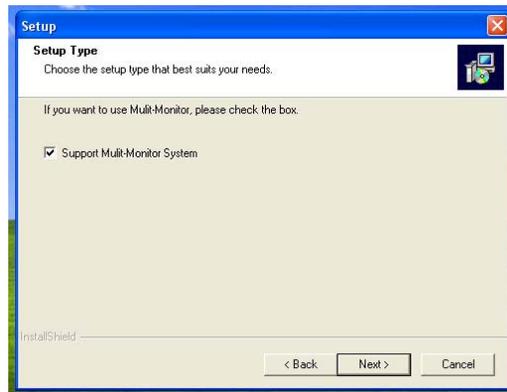


15. Click "Next".
16. Choose destination window will appear, click "Next".

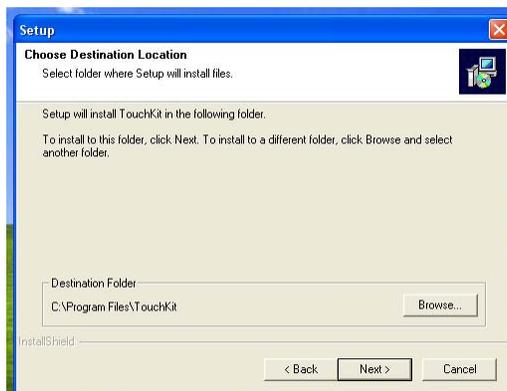


17. Select Program folder will appear; click "Next".

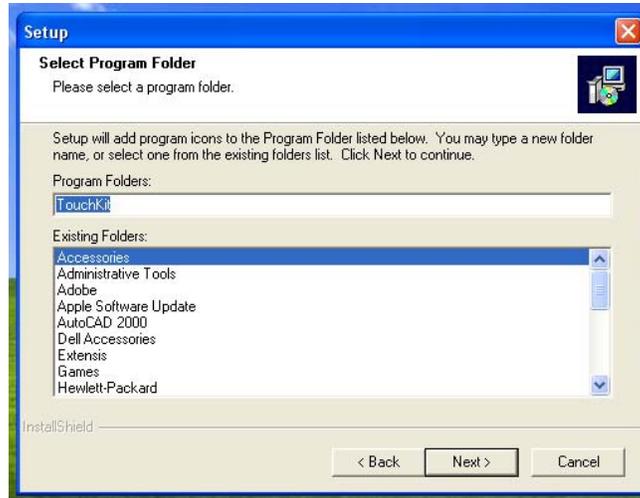

18. Installation will start.

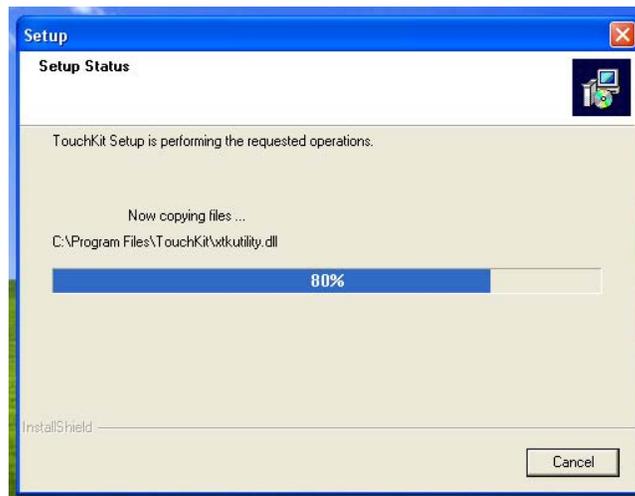


19. The question window regarding calibration will open; click "Yes".

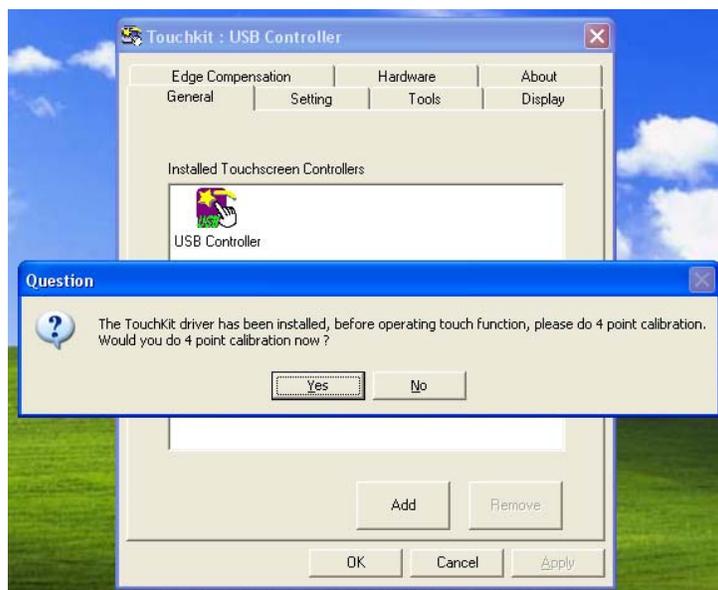

20. A flashing green/red "X" will appear on the lower left-hand side of the display.



- 21. Press and hold until two beeps are heard or when the "X" turns solid green.
- 22. Follow the same instruction as on the first "X".
- 23. Click "OK".

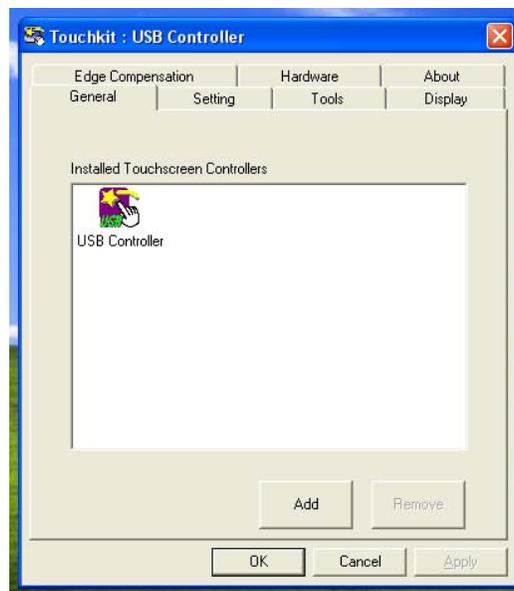


Removal of TouchKit Icon

1. Right mouse click on the Touchkit icon in the notification area of the taskbar (lower right-hand side of the display).



2. Window will appear.

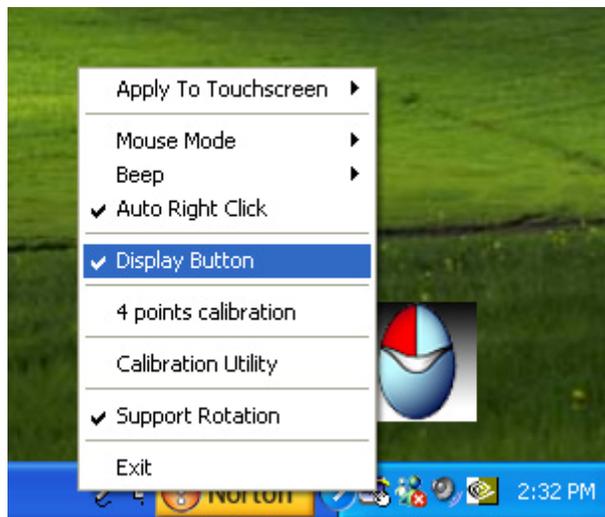

3. Click to un-check the "Display Button".



CyberTouch

853 Lawrence Drive
Newbury Park, CA 91320-2232, USA
Tel. (805) 499-5000 - Fax (805) 499-5888
© 1982-2006 CyberTouch