



Removal of TouchKit Icon

1. Right mouse click on the Touchkit icon in the notification area of the taskbar (lower right-hand side of the display).

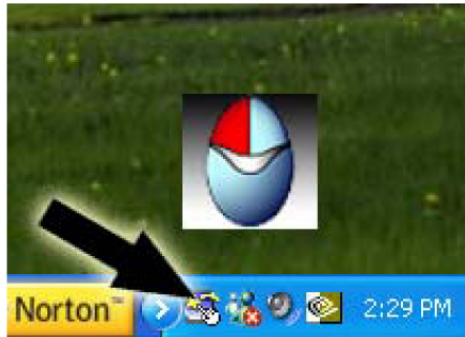

2. Window will appear.

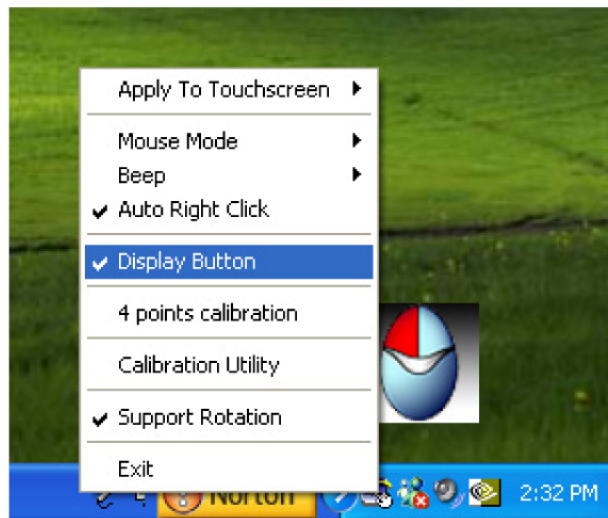

3. Click to un-check the "Display Button".