
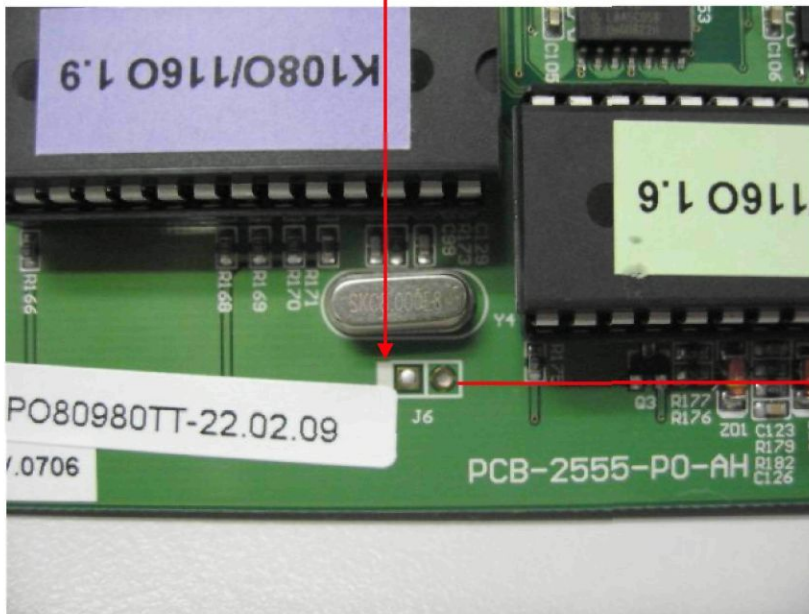


How to Reset KVM Password new on PS/2 version

- 1) The KVM password can only be reset on the KVM PCB board
- 2) Open the top cover of unit & KVM top metal cover
- 3) Find the jumper **J6**, then use either paper clip or scissors to touch the two boxes of **J6** then plug the power and hold for 5~10sec while holding the **J6** in order to close/short the jumper
- 4) The password can be reset to default “**00000000**” (8 digit of zero)

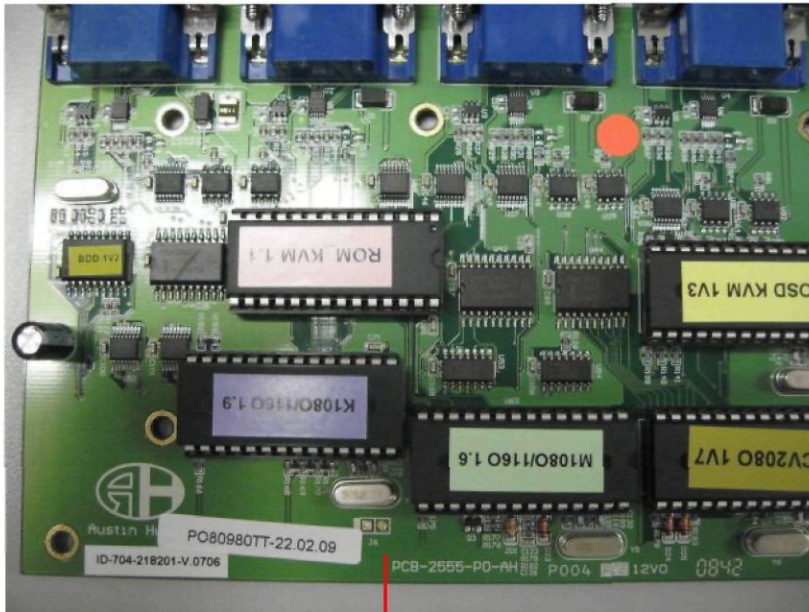

J6 version