


Remove and Replace Instruction Keyboard for NK-2

(1) Before your work, please make sure that **the power is disconnected.**

Step 1: Remove the top cover. (5 screws)



Step 2: Disconnect the cable and cut-off the cable tie

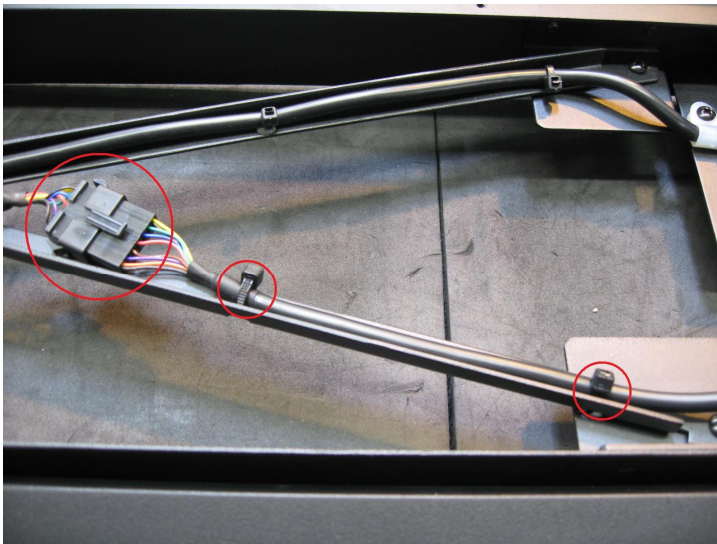

Step 3: Replace the keyboard.

