


Remove and Replace Instruction Keyboard for NVP "Ge" and "Gb"


(1) Before your work, please make sure that **the power is disconnected.**

Step 1: Remove the small top cover behind the LCD panel (3 screws)

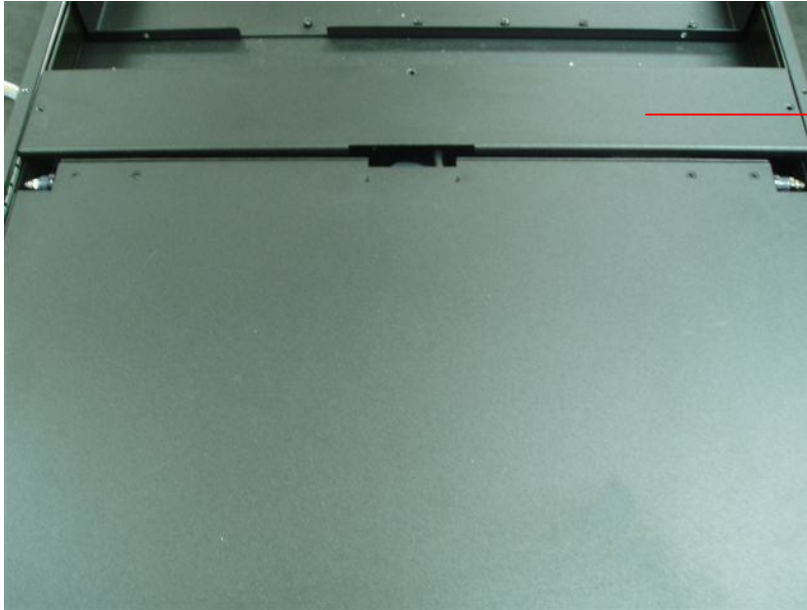

Remove this
small top cover

Step 2: Unplug connector of 7-pin keyboard cable very carefully

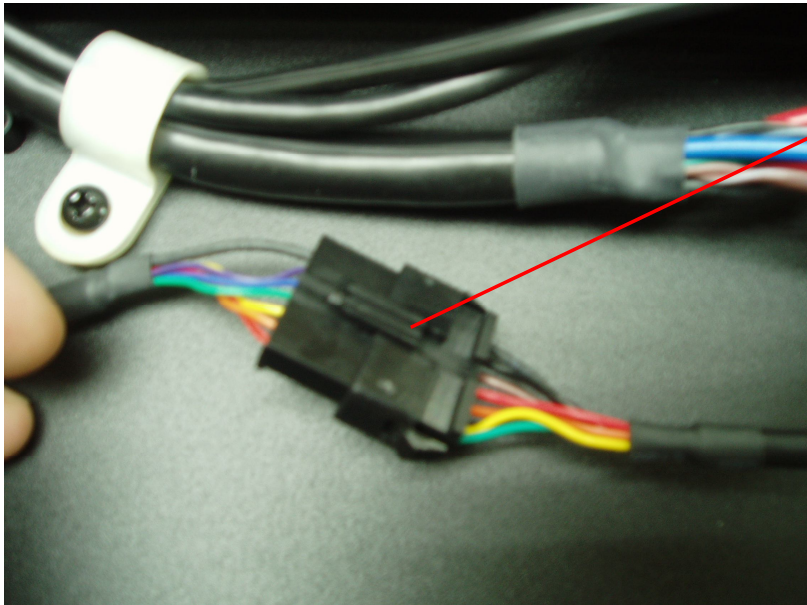


Unplug the 7-pin
connector

Step 3: Remove keyboard cover (9 screws as show in red circle)



Step 4: Disconnect the 4-pin touchpad/trackball cable from the keyboard

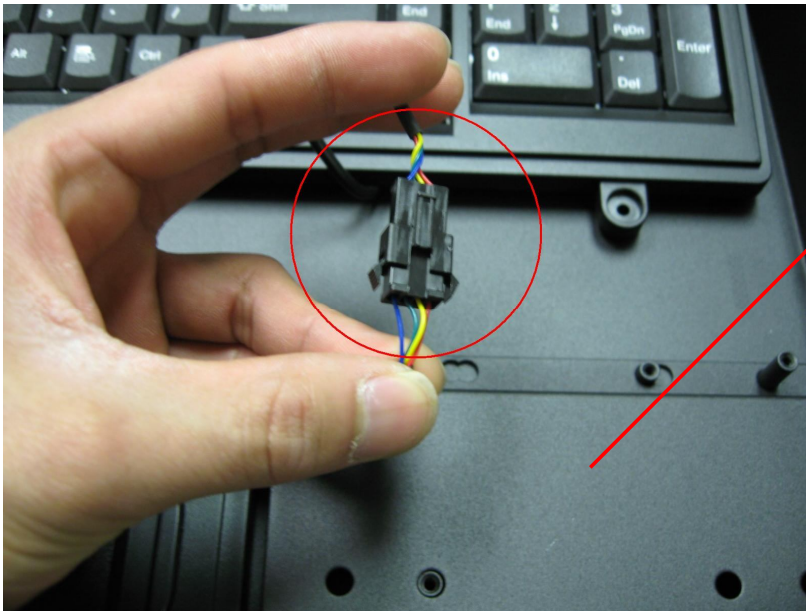

The 4-pin
connector is
under this cover

Step 5a: Remove 4 keyboard screws holder and then replace the defective keyboard.



Step 5b: Remove 2 keyboard screws holder and then replace the defective mouse module.



Step 6: Please reverse the procedures to assemble back the unit.

PLEASE DON'T FLIP DOWN THE LCD SCREEN IN CASE DAMAGE



i-Tech Company LLC

TOLL FREE: (888) 483-2418 • EMAIL: info@itechlcd.com • WEB: www.iTechLCD.com