


## Instruction on how to check the Internal Power Adapter for NVP with KVM series


Before your work, please make sure that **the power is disconnected.**

### **Step 1: Remove the top rear cover behind the LCD panel**

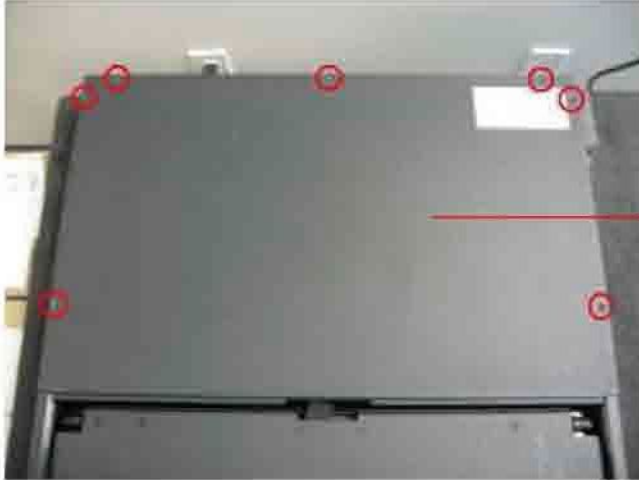

Remove this rear top cover by releasing 7 screws.

### **Step 2: Remove the KVM top cover.**

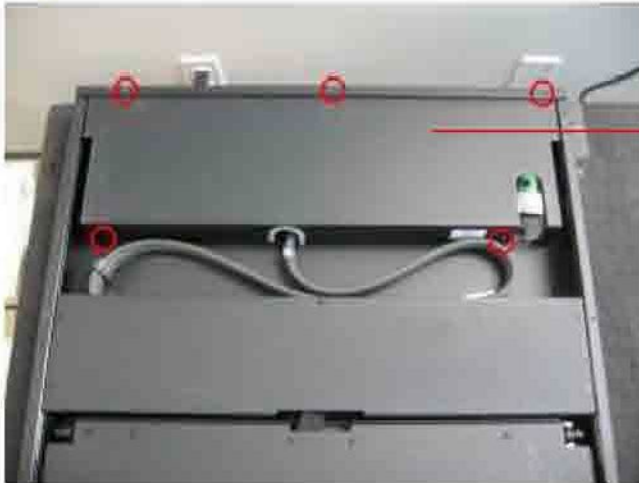

Remove this KVM top cover by releasing 5 screws.



**Step 3: Check the light on the Power Adapter**



Take out the power adapter



The light on power adapter should be in solid green

**Step 4: Finally, please follow Step 2 to Step 1 to install back the KVM top cover & top rear cover to complete the procedure of replacement.**