


To remove and change rear kit on 1U NVP series


(1) Before your work, please make sure that **the power is disconnected.**

Step 1: Remove the top rear cover behind the LCD panel

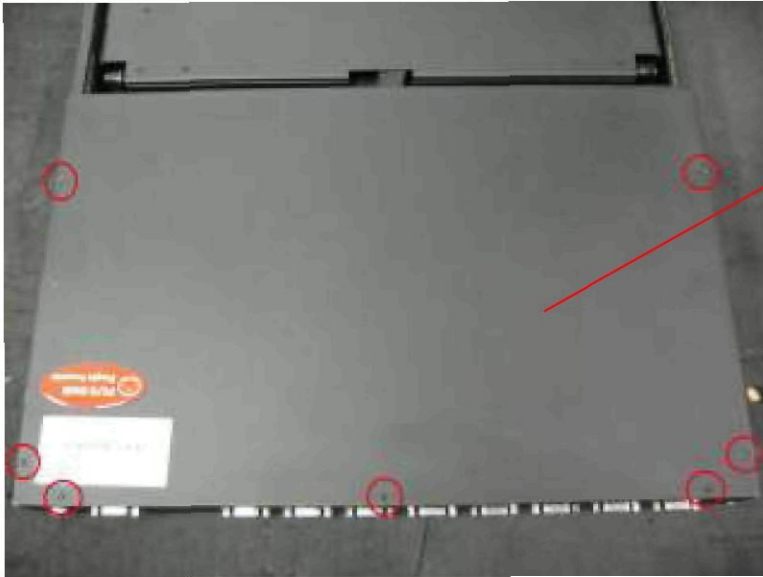


Remove this rear top cover by releasing 7 screws.

Step 2: Remove the small top cover behind the LCD panel.

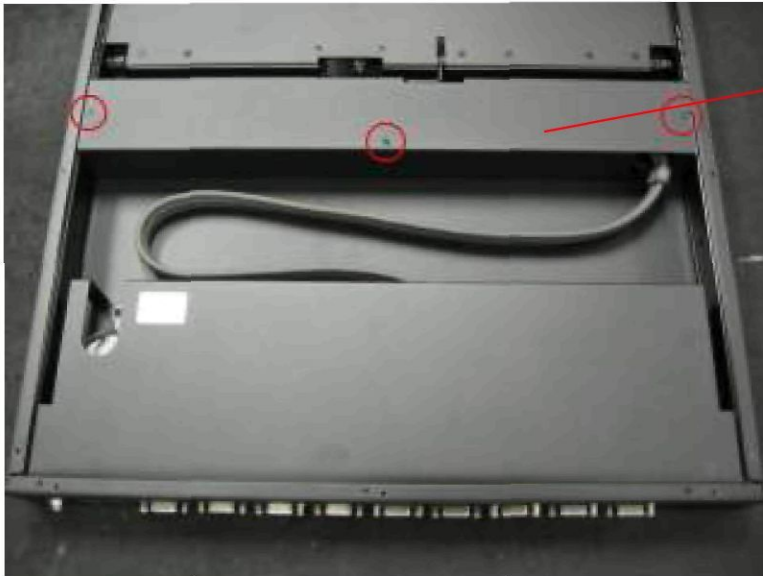

Remove this small top cover by releasing 5 screws.

Step 2: Unplug four connectors from the original unit as shown below, then reconnect those back on the new KVM rear kit carefully.

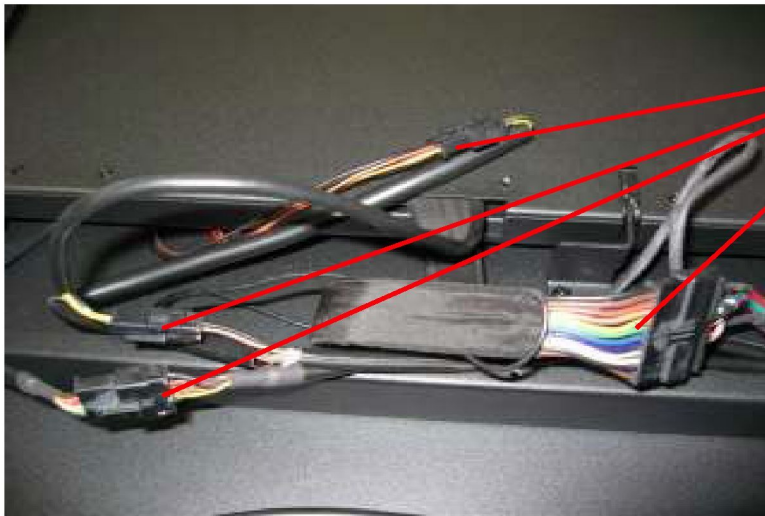

Unplug these four connectors

Step 3: Remove the rest of rear kit screws (3 on the bottom, 2 on each sides)



Step 4: Finally, please follow Step 3 to Step 1 to install back the rear kit, small cover & top cover to complete the procedure of replacement.