

Lock or Unlock OSD for ECH/EPM/EOP Series.

If it's OSD key lock that key buttons no response unable to do adjustment, DOWN+MENU can unlock or lock OSD key operation.

