


# Instruction to change rear kit on 1U NVP (NVP-series)


(1) Before your work, please make sure that **the power is disconnected.**

**Step 1: Remove the top rear cover behind the LCD panel**

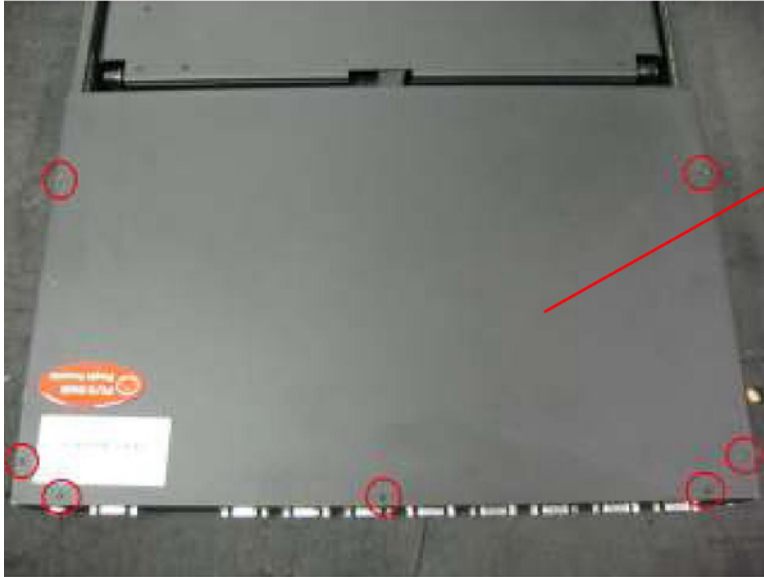


Remove this rear top cover by releasing 7 screws.

**Step 2: Remove the small top cover behind the LCD panel.**

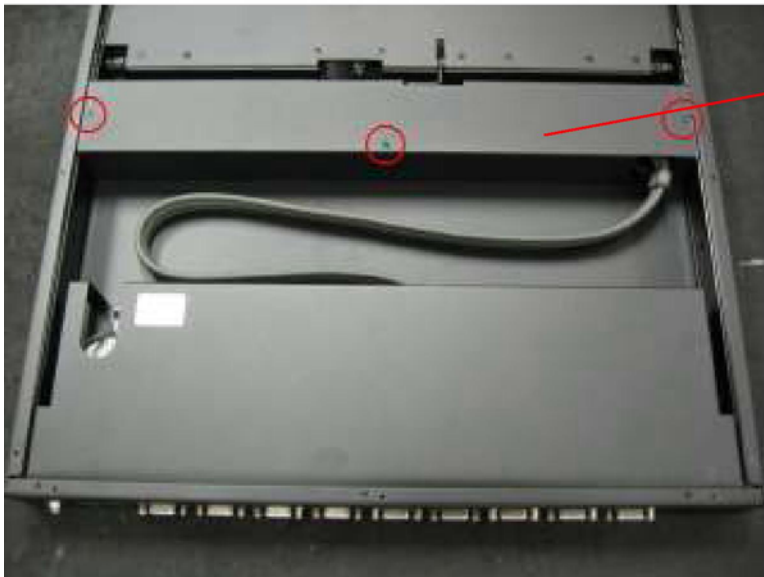

Remove this small top cover by releasing 5 screws.

**Step 2:** Unplug four connectors from the original unit as shown below, then reconnect those back on the new KVM rear kit carefully.

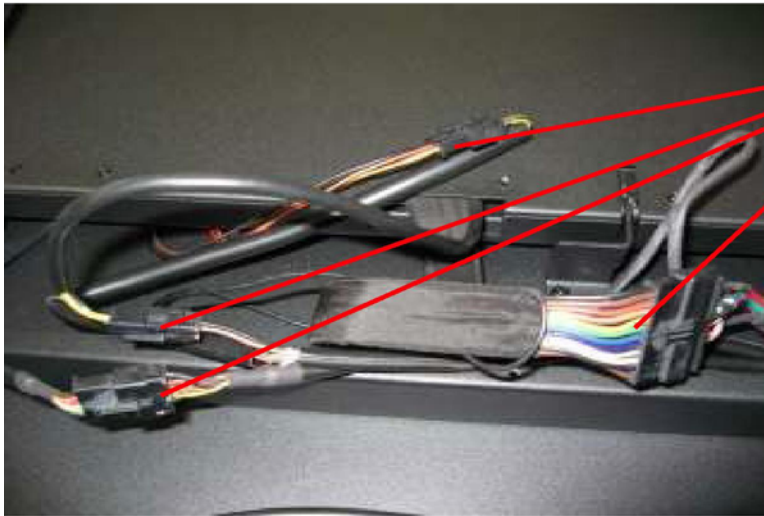

Unplug these four connectors

**Step 3:** Remove the rest of rear kit screws (3 on the bottom, 2 on each sides)



**Step 4:** Finally, please follow Step 3 to Step 1 to install back the rear kit, small cover & top cover to complete the procedure of replacement.