

Reset


DKP KVM Password

How to reset OSD password:

1. Please connect keyboard, mouse, and monitor on local console and plug in the power adapter.
2. You can see the screen on the monitor as below picture



3. Please see the back of your KVM and you can see the a small square hole as below picture.

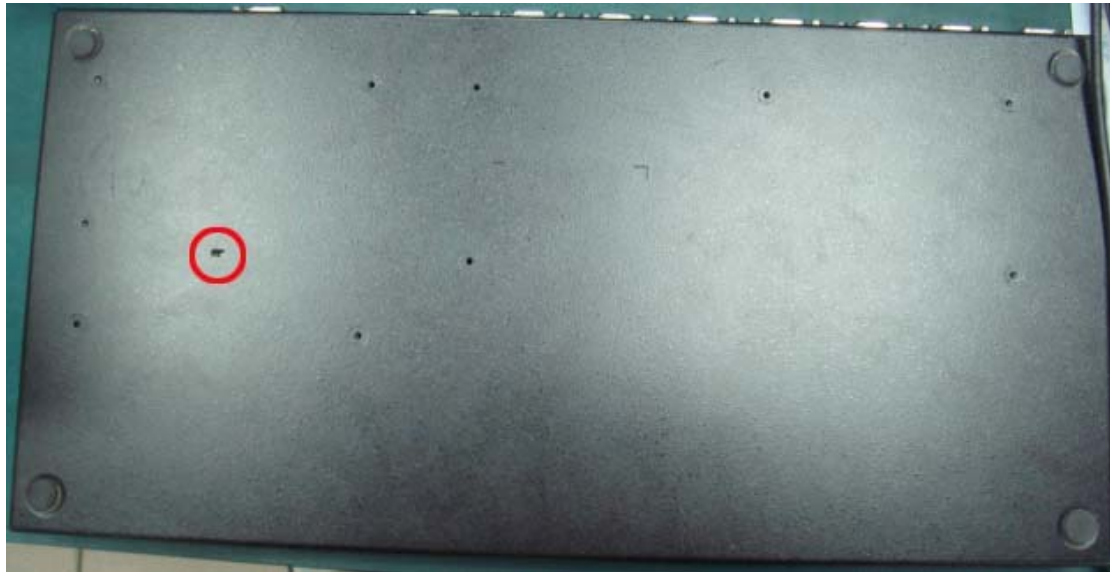

4. You can see two pins in this small square hole.



5. Please use iron stick to make this two pins become a shot circuit. And then you can see the screen display on you monitor as below picture. Please retype new password on this screen.

RETYPE NEW PASSWORD :
ESC : QUIT ENTER : COMPLETE

6. J7 shot a few time (2~5sec) Combo-free
7. J2 shot a few time (2~5sec) CAT5



PS/2 KVM switch

Power on KVM switch and short J6 for 2-5 seconds

Power off KVM switch then power it on use " 00000000" as default password

