

# LCD monitor DA001 OSD operation

## Control Functions

The Monitor control functions are located on the lower side of the panel.

The control key description

1. MENU : Activate the on-screen-display function
2. ▽ : Down / Brightness control
3. △ : Up / Brightness control
4. Auto : AUTO-ADJUSTMENT
5. ⏻ : Power Switch

## Description

### 1. Menu

Press the Menu key to activate the on screen display screen. It is a toggle key. Press twice to turn off the OSD. After 30 sec. idle time, the OSD screen will automatically turn off.

### 2. ▽ & △ : Select key

The two keys have two sets of functions:

- When OSD screen is not activated, the two keys are used to adjust the Backlight.
- When OSD screen is activated (When "Menu" key is pressed), the two keys are used to select the wanted adjustment items

### 3. Auto

Press Auto Key to get the optimized quality.

### 4. ⏻ : Power switch

Use the power switch to turn ON or OFF power. We recommend turning your system power on first, then the LCD monitor.

### 5. Lock OSD : Push and hold the MENU and Down button

Display ICON will show OSD LOCK

Release Lock OSD : Push and hold the MENU and Down button

Display ICON will show OSD UNLOCK

 
# ADJUSTING THE MONITOR

The LCD monitor is designed to work with a range of compatible video adapters on the market. Due to the possible deviations between these video adapters, you may make some adjustment to fit the monitor for adapter used.

## ADJUSTMENT PROCEDURE

First, you must activate the OSD screen through pressing the MENU key, the screen will show in the center of screen as below:

### OSD SCREEN

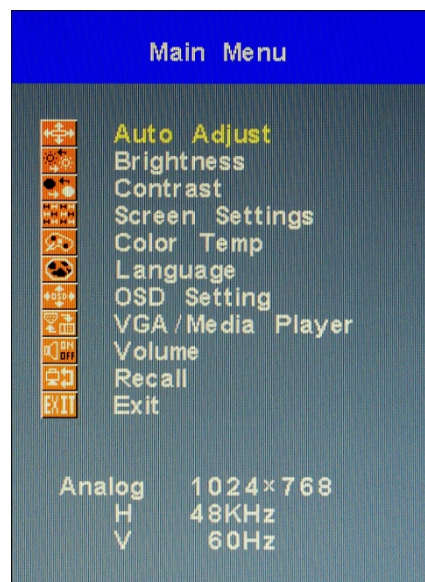


- Use the ▾ & ▴ key to select the required adjustment item up or down.
- Use Menu key to do the desired function or go into the second menu item to do the further change.
- Use the ▾ & ▴ key to select the Exit **EXIT** item to turn off OSD. Or After 30 sec. idle time, the OSD screen will automatically turn off.

## AUTO-ADJUSTMENT

  
**WE STRONGLY RECOMMEND THAT YOU USE THIS ITEM TO GET THE OPTIMIZED VISUAL QUALITY.**

- Use the ▾ & ▲ key to select auto-adjustment, and then press Menu Key to get the optimized quality.
- Or press Auto Key to get the optimized directly.

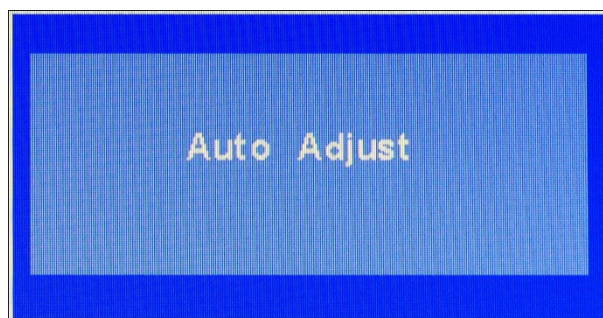


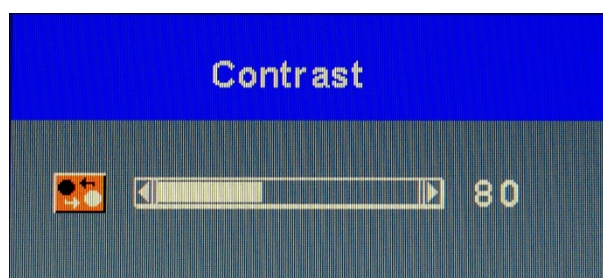 
## BRIGHTNESS ADJUSTMENT

- Use the ▾ & ▲ key to select the Brightness  item, press Menu Key to change the brightness value.
- Use the ▾ & ▲ key to adjust the Brightness.
- Then press menu key to confirm.

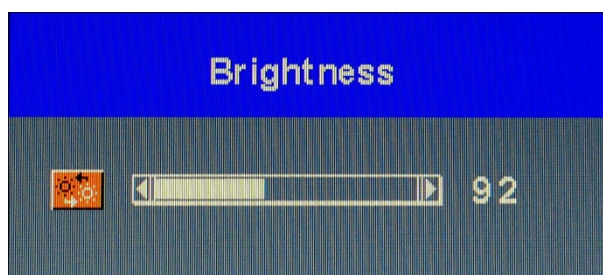

## ADJUST THE CONTRAST VALUE

 
- Use the ▾ & ▲ key to select the CONTRAST  item, then press Menu Key to get the best contrast optimization.
- Use the ▾ & ▲ key to adjust contrast value.



## Screen Settings


- Use the ▾ & ▲ key to select the Screen Settings  item, then press Menu Key to get the

best Screen Settings optimization.

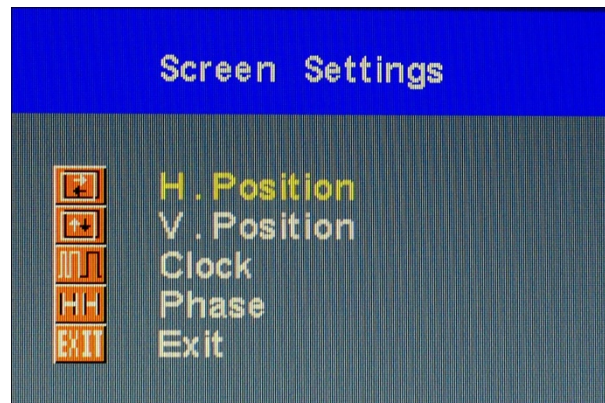


### ● H.Position

 - Use the ▾ & ▴ key to select the H.Position item, then press Menu Key to get the best optimization.
- Use the ▾ & ▴ key to adjust H.Position value.
- Then press menu key to confirm.

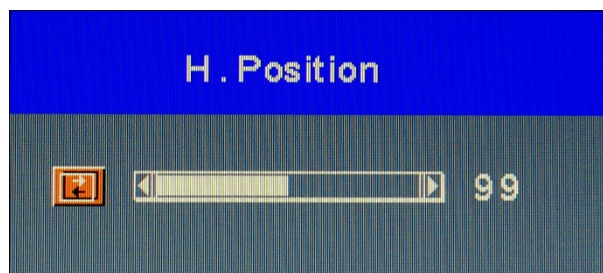


### ● V.Position

 - Use the ▾ & ▴ key to select the V.Position item, then press Menu Key to get the best optimization.
- Use the ▾ & ▴ key to adjust V.Position value.
- Then press menu key to confirm.

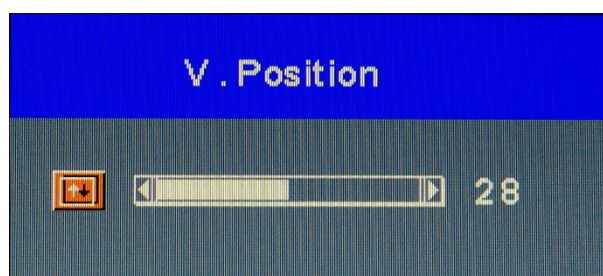


### ● Clock

 - Use the ▾ & ▴ key to select the Clock item, then press Menu Key to get the best optimization.
- Use the ▾ & ▴ key to adjust increase or decrease video H Size of the picture.
- Then press menu key to confirm.

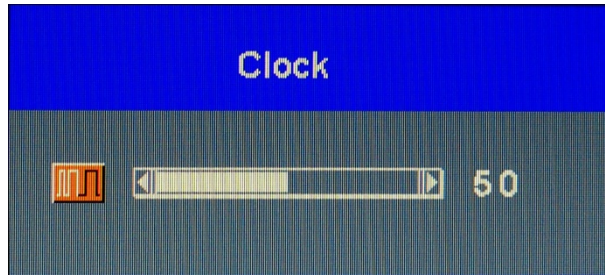

- **Phase**

 - Use the ▽ & ▲ key to select the Phase item, then press Menu Key to get the best optimization.
- Use the ▽ & ▲ key to adjust increase or decrease video Quality of the picture.
- Then press menu key to confirm.

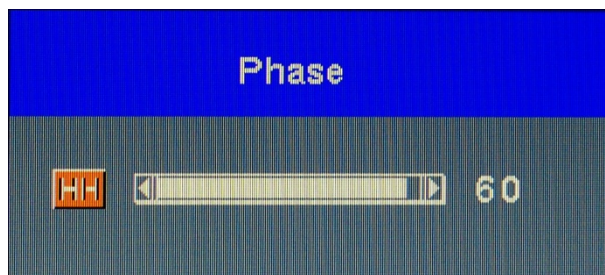

### **Color Temperature**

 
- Use the ▽ & ▲ key to select the Color Temp  item, then press Menu Key to get the language selection.
- Use the ▽ & ▲ key to select the adjust the display color of the picture.



- Use the ▽ & ▲ key to select temperature 9300K, 7500K and 6500K of the picture.

- **User Color**

- Use the ▽ & ▲ key to select User Color, then press Menu Key to get the best color optimization.
- Use the ▽ & ▲ key to select Red, Green & Blue to adjust the display user color of the picture.

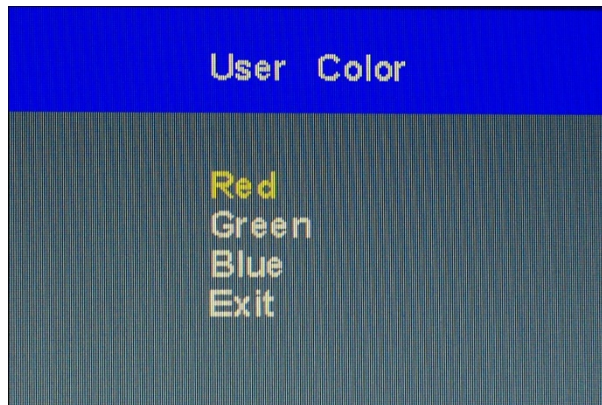


- **Auto Gain**


- Use the ▽ & △ key to select Auto Gain, then press Menu Key to get the best color optimization that will be activated the auto adjusting input video color level for the picture.

- **sRGB**


- Use the ▽ & △ key to select SRGB, then press Menu Key to get the best color optimization.


### Language Setting

  - Use the ▽ & △ key to select the Language  item, then press Menu Key to get the language selection.
- Use the ▽ & △ key to select the Language.
- Then press Menu key to confirm.

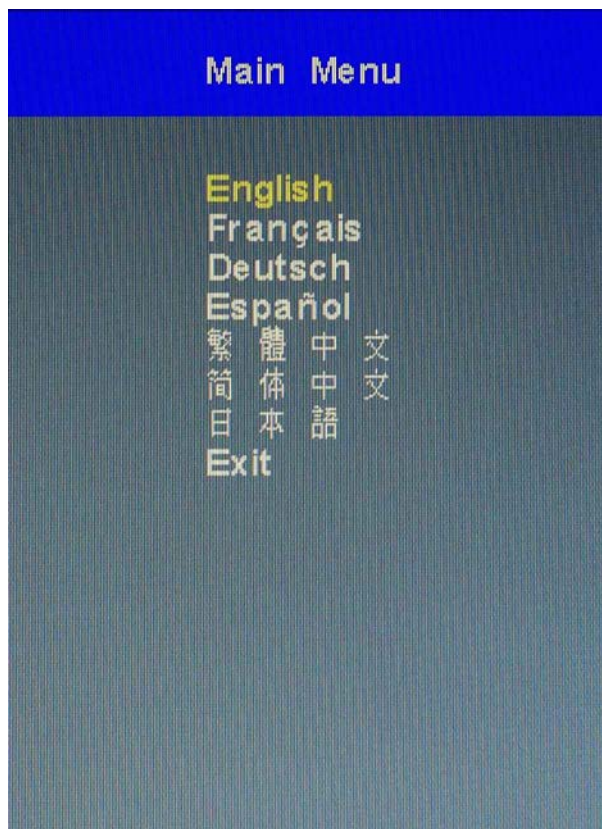


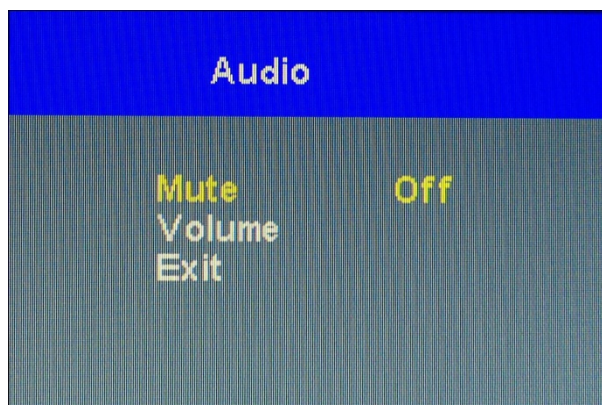 
## OSD Setting

- Use the ▽ & ▲ key to select the OSD Setting  item, then press Menu Key to get the OSD setting selection.
- You could set up the property of Position, Display Timer, and Transparency of OSD menu.

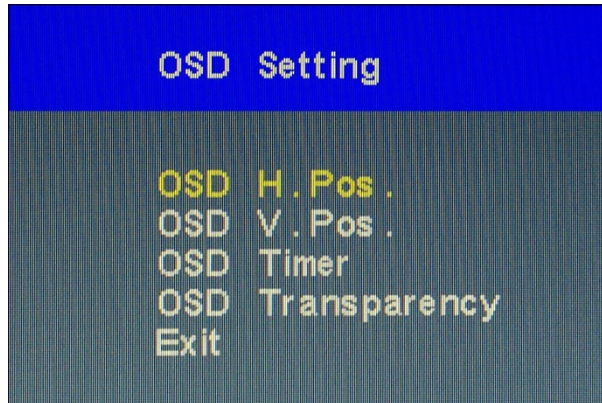

## Volume

- Use the ▽ & ▲ key to select the Volume  item, then press Menu Key to get the Volume setting.
- Use the ▽ & ▲ key to select Volume and mute on/off.
- Use menu key to select Mute on / off
- Then select Exit to the last page.



## Recall

- Use the ▽ & ▲ key to select the Recall  item, then press Menu Key to get the default setting.