


Brightness setting guide

IR remote controller instruction:

1. Yellow : Equal to the OSD "on/off" switch
2. Green : Equal to the OSD "Menu/ select" switch
3. White : Equal to the OSD "Auto/Exit" switch
4. Red : Equal to the OSD "+ /-" switch

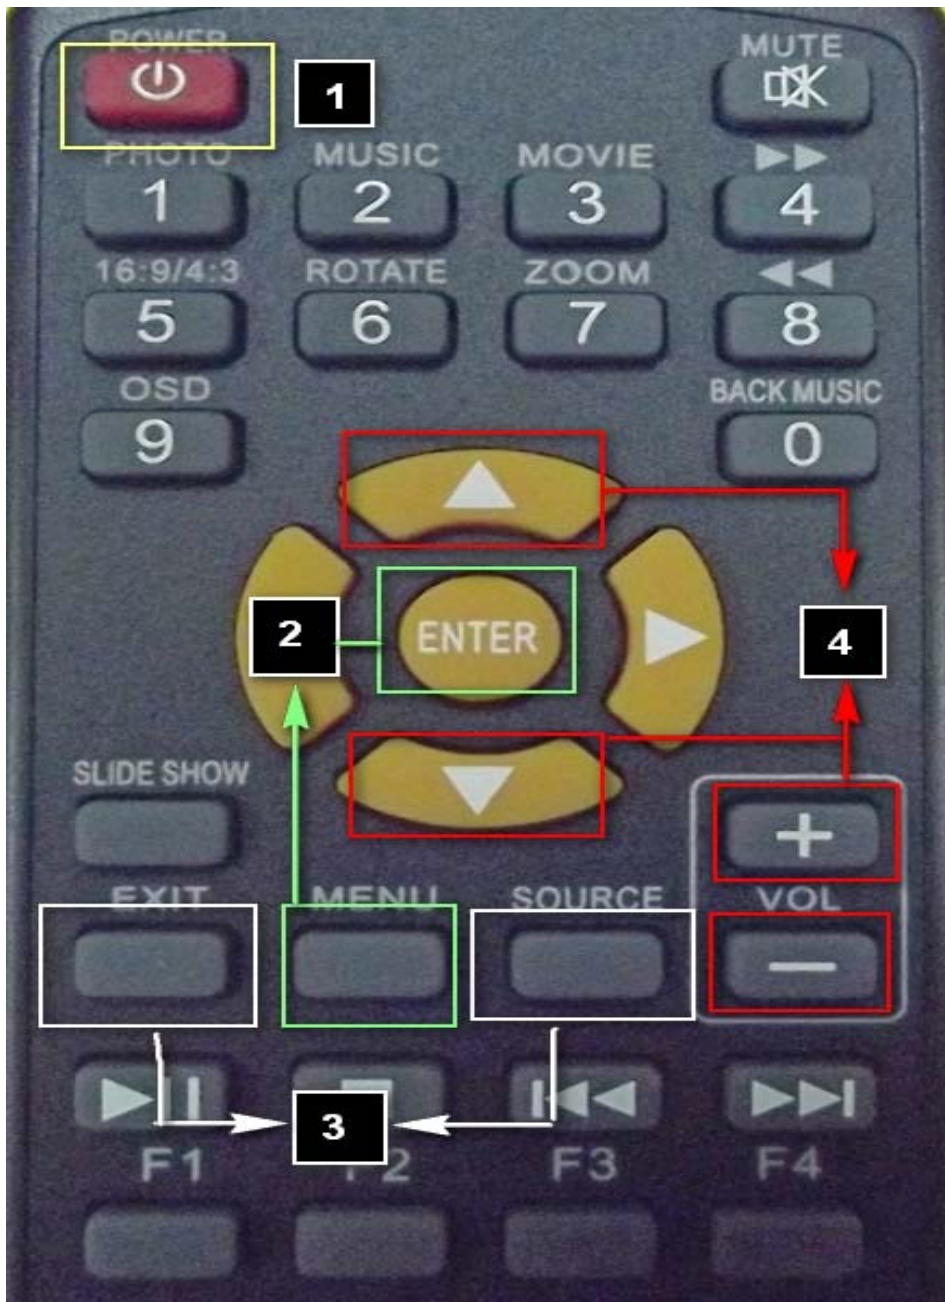

Please turn off auto dimming function before change brightness setting.

(Please follow the steps as below)

1. Enter menu and then enter "Color " setting.



2. Enter "AutoLight" setting and then choose "off" to turn off the auto dimming function.



3. Enter "brightness" setting and then adjust the brightness setting.

