


## **To verify the power adapter status – NVP Series**

(1) Before your work, please make sure that **the power is disconnected.**

**Step 1:** Remove the top cover behind the LCD panel. (5 screws)



**Step 2:** Remove the bearing plate, and then remove the 2 screws under the plate.  
(Both sides)

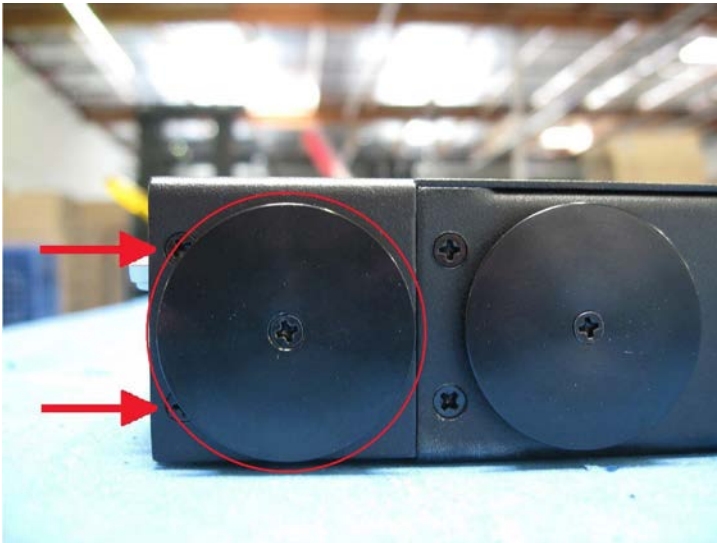

**Step 3:** Once the top cover removed, please verify the LED light on the power adapter, it should be a **SOLID** green light.

