

QPC Mounting Instructions



i-Tech Company LLC

TOLL FREE: (888) 483-2418 • EMAIL: info@iTechLCD.com • WEB: www.iTechLCD.com

Mounting: VESA 75

For VESA Application. Please follow the following steps.

1) Please ensure the mounting surface are flat and without any obstacles between the wall and the system.

2) Select any mounting kits that uses a VESA 75.

4) Follow the mounting instruction for the VESA 75 kit that you have chosen to mount the system. (Please note M4 screws are required to correctly mount the system.)




- Please use M4 Screws
- For Cut-Out dimension and screw location, please contact your sales agent.

Mounting: *Wall Mount*

For Wall Mount Application.
Please follow the following steps.

- 1) Please ensure the mounting surface are flat and without any obstacles.
- 2) Locate the mounting kit that are included with the system.
- 3) Mount the bracket to the wall with distance according to the mounting length given for each specific system size. **(Please note: M4 Screws are required to mount the system correctly)**
- 4) Insert and slide downwards to secure the system.
- 5) Insert the screw into the side of the system to lock the system in place.

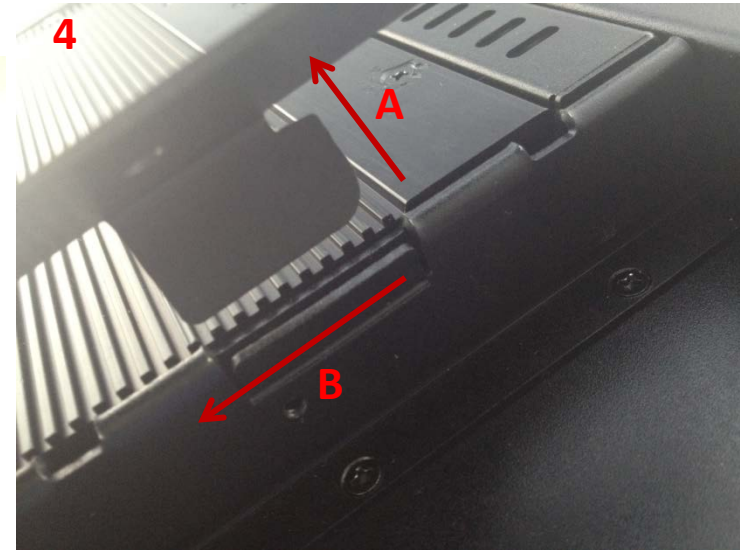

Mounting: *Bezel Mount*

For Bezel Application. Please follow the following steps.

1) Please ensure the mounting surface are flat and without any obstacles.

2) Prepare the wall/cabinet cut out according the dimensions given for each specific system size.

3) Prepare the holes for locking screws according to the dimensions given for each specific system size

4) Insert the system in to the cut out. Then secure the screws into the pre-made screw hole to secure the system on to the wall/cabinet.



- Please use M4 Screws
- For Cut-Out dimension and screw location, please contact your sales agent.

Mounting: *Front Mount*

For Front Mount Application.
Please follow the following steps.

1) Please ensure the mounting surface are flat and without any obstacles.

2) Prepare the wall/cabinet cut out and the according the dimensions given for each specific system size.

3) Prepare the holes for locking screws according to the dimensions given for each specific system size

4) Remove the screws that's holding the system front bezel to create a open frame system

5) Locate the locking beads that are included with each system.



- Please use M4 Screws
- For Cut-Out dimension and screw location, please contact your sales agent.

Mounting: *Front Mount*


6) Insert the locking beads in to the casing opening on the system that's given in the dimension menu. **(Please note the smaller ends must face forward for correct mounting.)**



7) Insert the system in to the pre-made cut out with locking beads in place.



8) Tighten the screw in to the pre-made locking screw opening to secure the system on to the wall/cabinet.

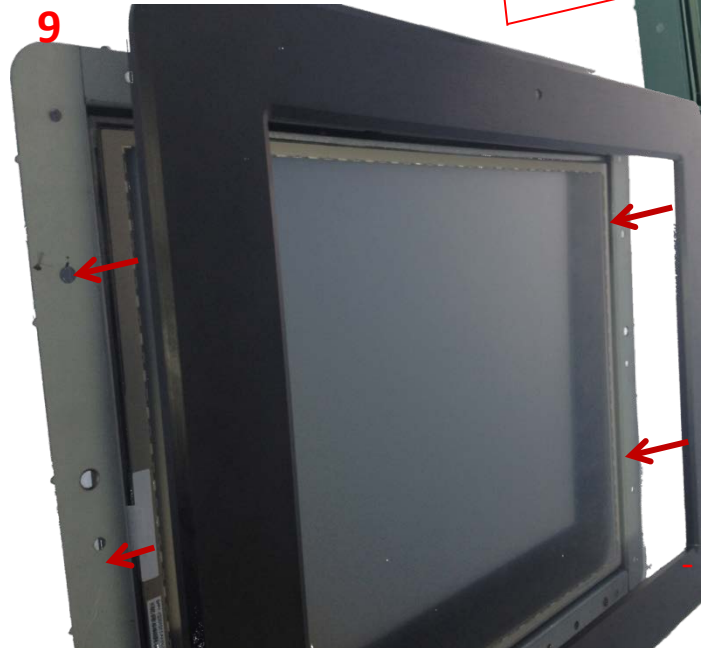

9) After the system is secured onto the wall/cabinet with locking beads in place. Carefully align the bezel with the beads and re-attach the bezel to the system. **(Push down on the bezel at where the beads are placed to ensure a tight fitting.)**

- Please use M4 Screws
- For Cut-Out dimension and screw location, please contact your sales agent.