
To remove and replace DVI KVM board for rear-kit

(1) Before your work, please make sure that the power is disconnected.

Step 1: Remove the top rear cover behind the LCD panel

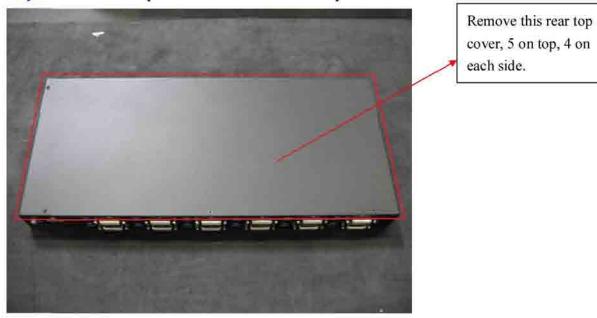

Step 2: Disconnect all the connector on DVI KVM board carefully to prevent the damage to the wires.






Step 3: Remove all the hexagonal bolts for port #1, #4, #6, #7, #10, #12, and then remove the old DVI KVM board.



Step 4: Finally, please follow Step 3 to Step 1 to install back the rear kit, rear-kit cover & top cover to complete the procedure of replacement.

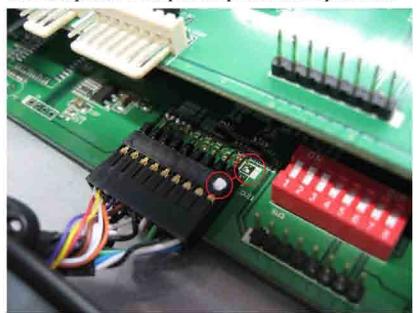

NOTE: When connect back the cable, please make sure the "white dot" is facing up to match the right pin-out.

