KENDALL HOWARD®

Assembly Instructions

Phantom Class® Open Frame Swing-Out

Part Numbers:

1915-3-800-12

1915-3-800-18

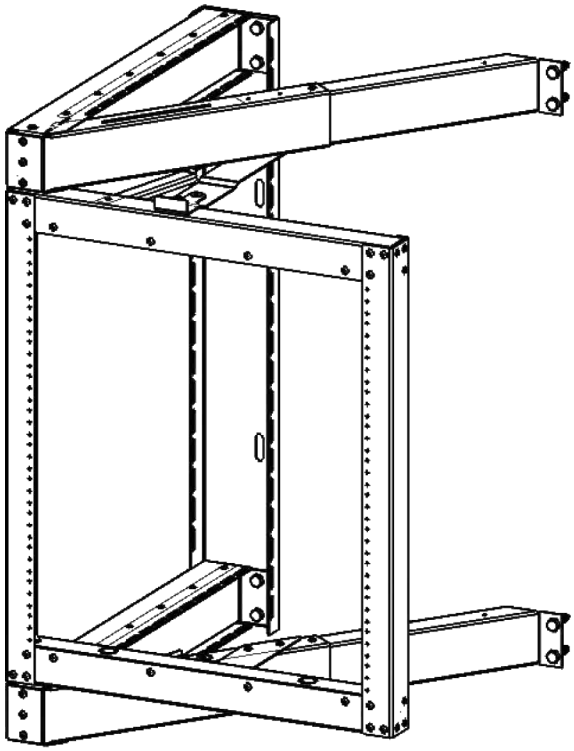

i-TECH COMPANY

Distributed by : i-Tech Company LLC

TOLL FREE: (888) 483-2418 • EMAIL: info@iTechLCD.com • WEB: www.iTechLCD.com

Tools needed:

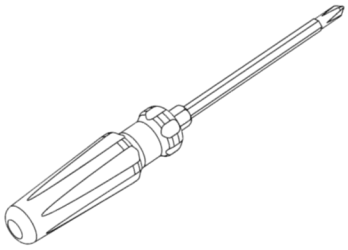

Philips Head ScrewDriver

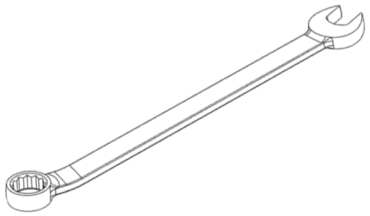

3/8” Wrench

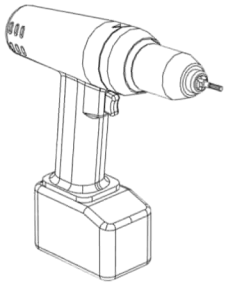

Power Drill

What’s in the box?

** You will need to supply your own mounting hardware

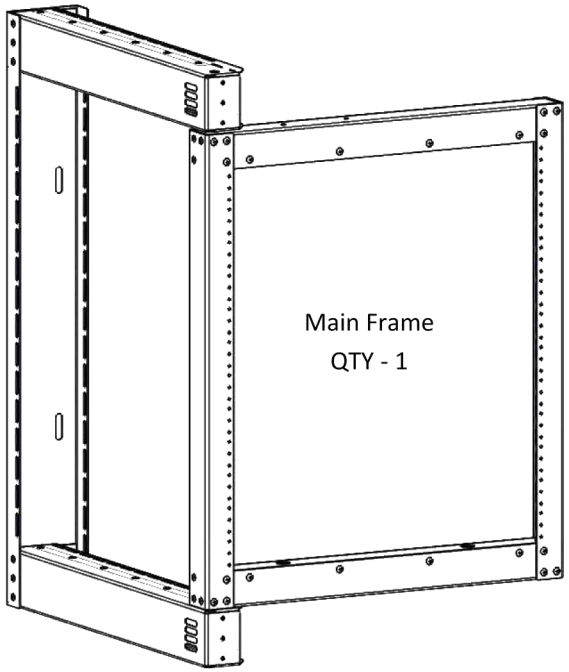

Main Frame
QTY - 1

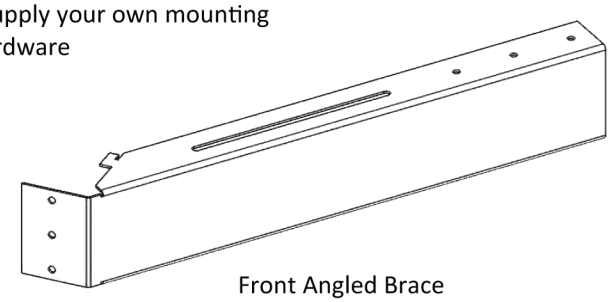

Front Angled Brace
QTY - 2

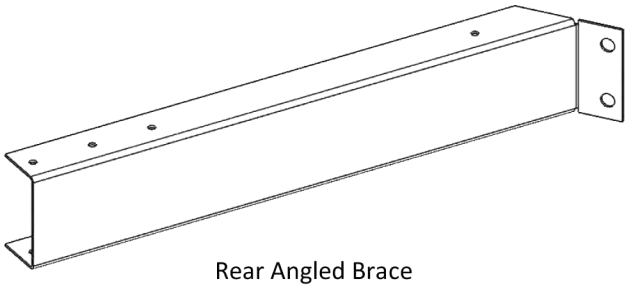

Rear Angled Brace
QTY - 2

Swing-Out Brace
QTY - 2

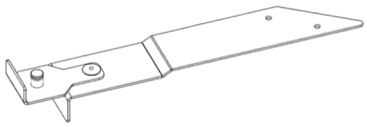

Upper Stop Bracket w/Latch
QTY - 1



Lower Stop Bracket
QTY - 1

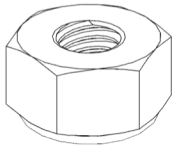

Nylock Nut
QTY - 8

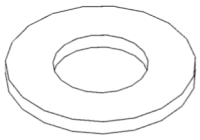

Flat Washer
QTY - 4



6-32 Screw
QTY - 4

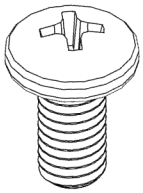

10-32 Screw
QTY - 14

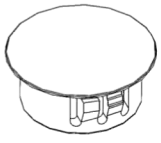

Black Cap
QTY - 4

Step 1:

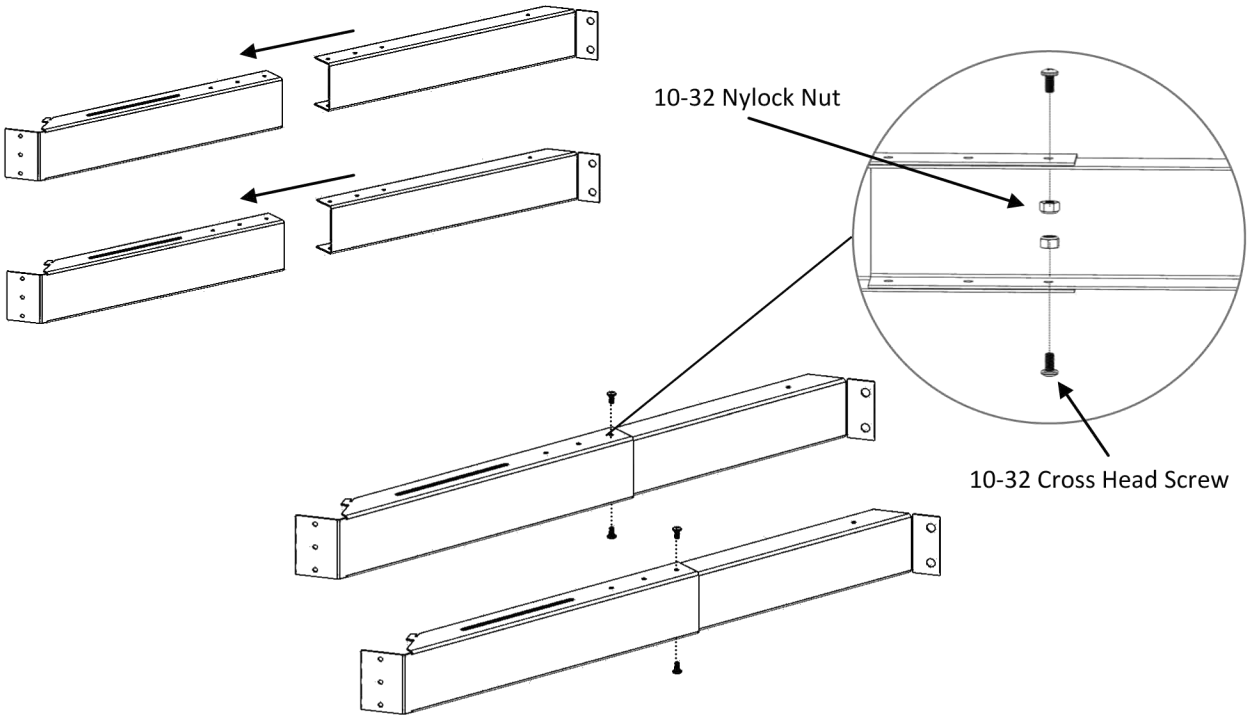

Step 2:

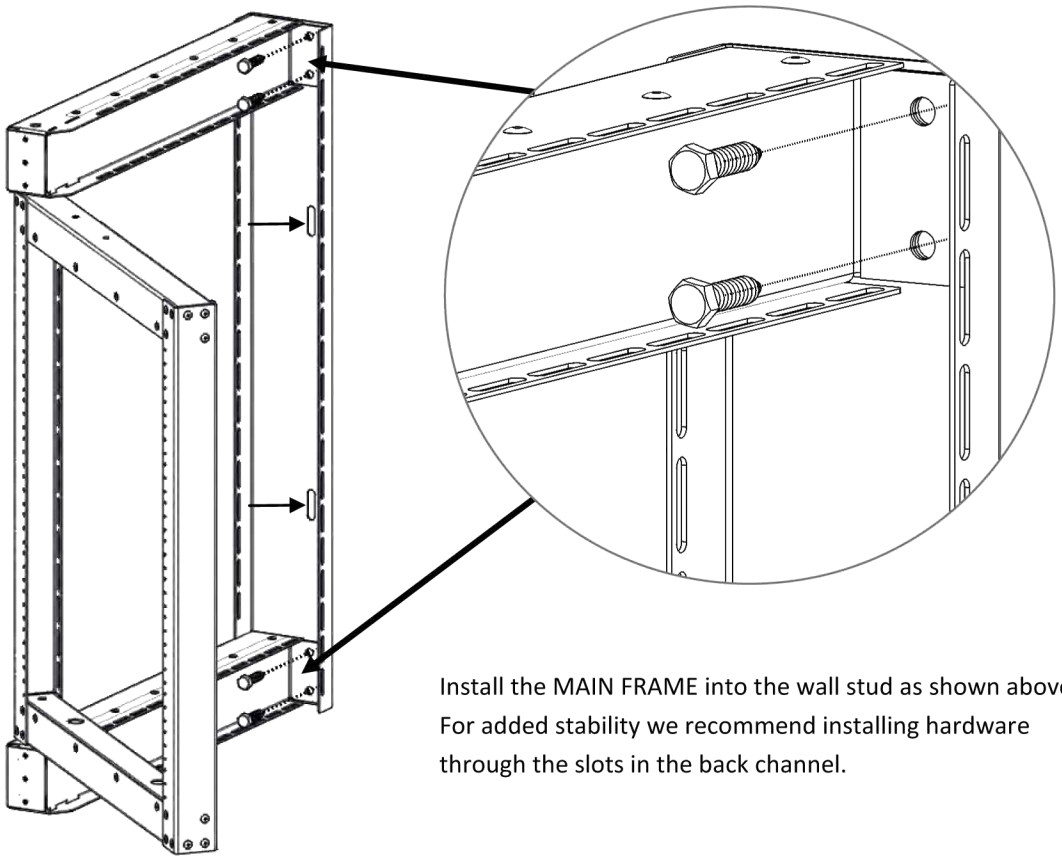

Install the MAIN FRAME into the wall stud as shown above. For added stability we recommend installing hardware through the slots in the back channel.

** Mounting Hardware Not Included **

Step 3:

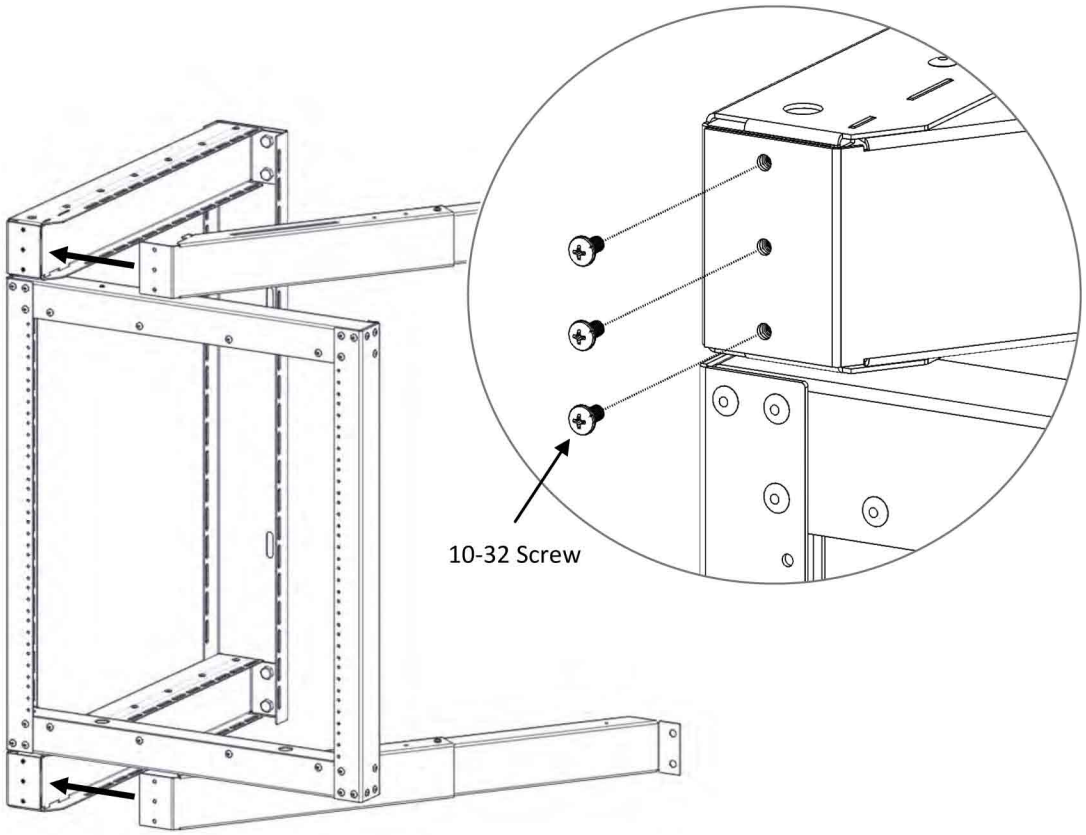

Step 4:

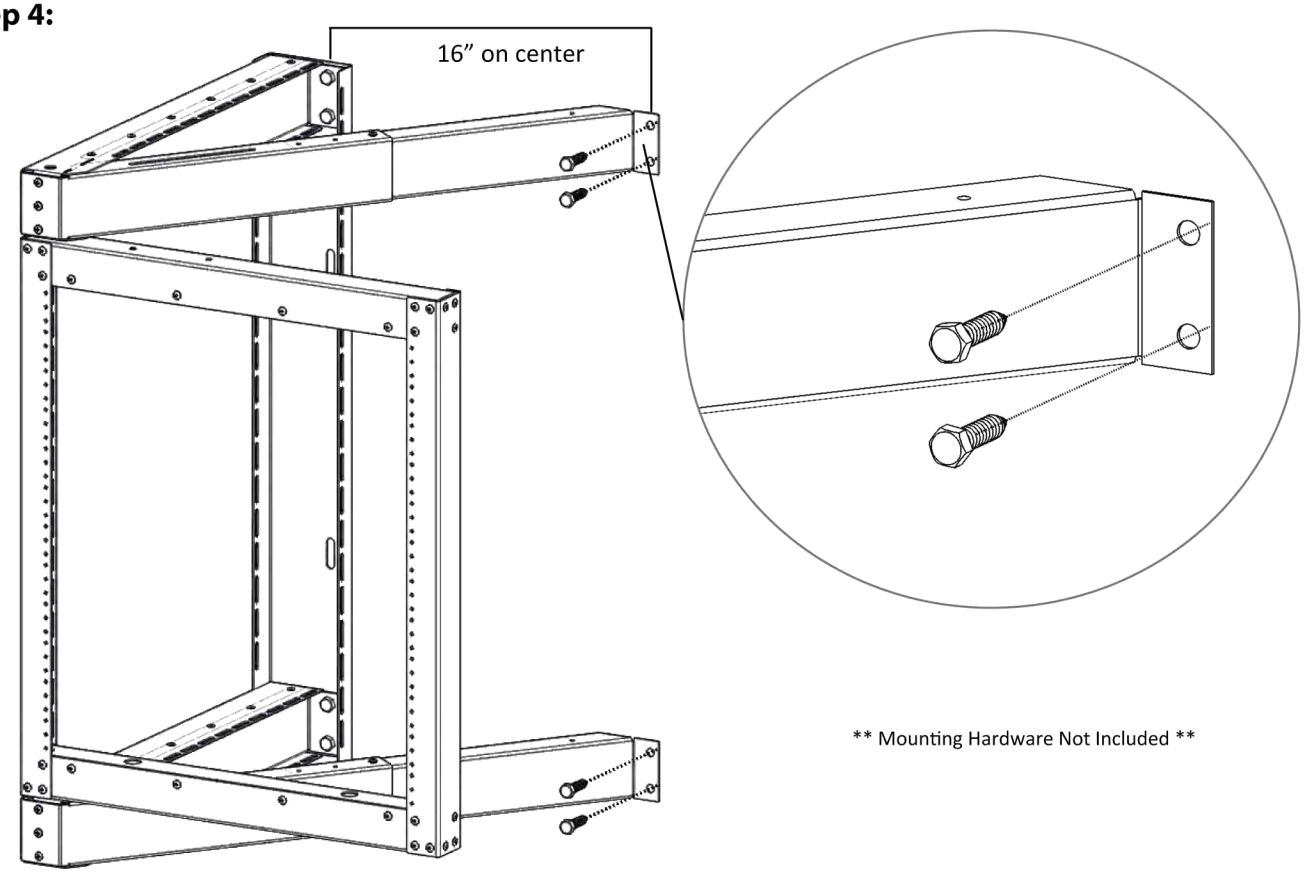

** Mounting Hardware Not Included **

Step 5:

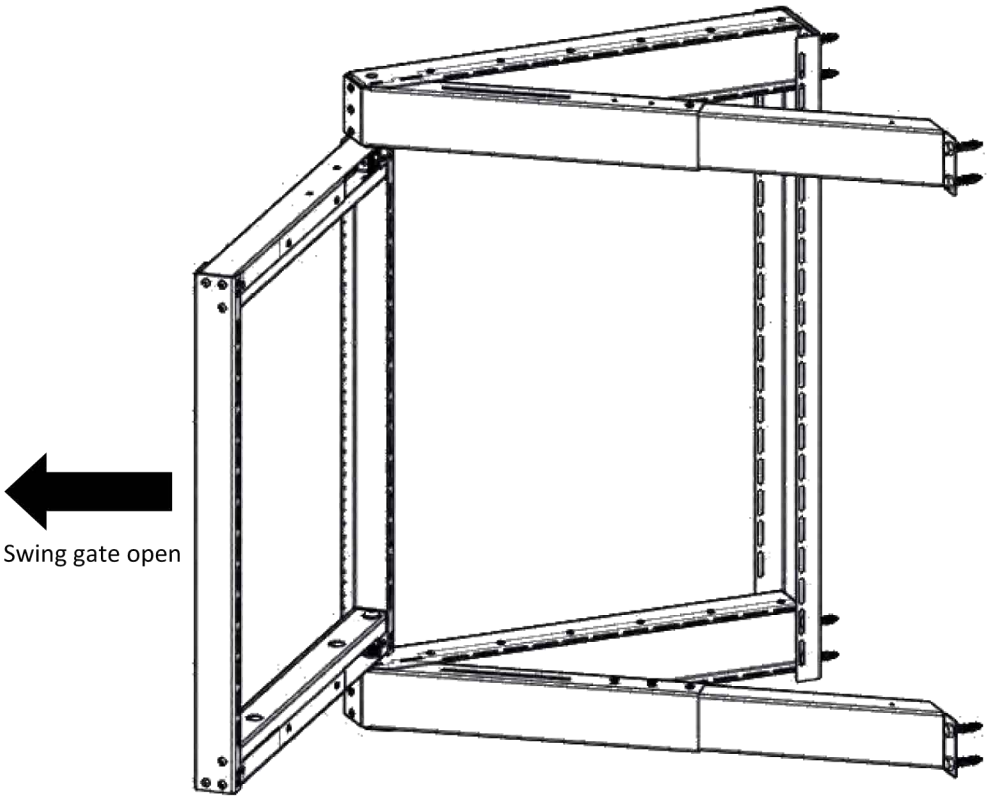

Step 6:

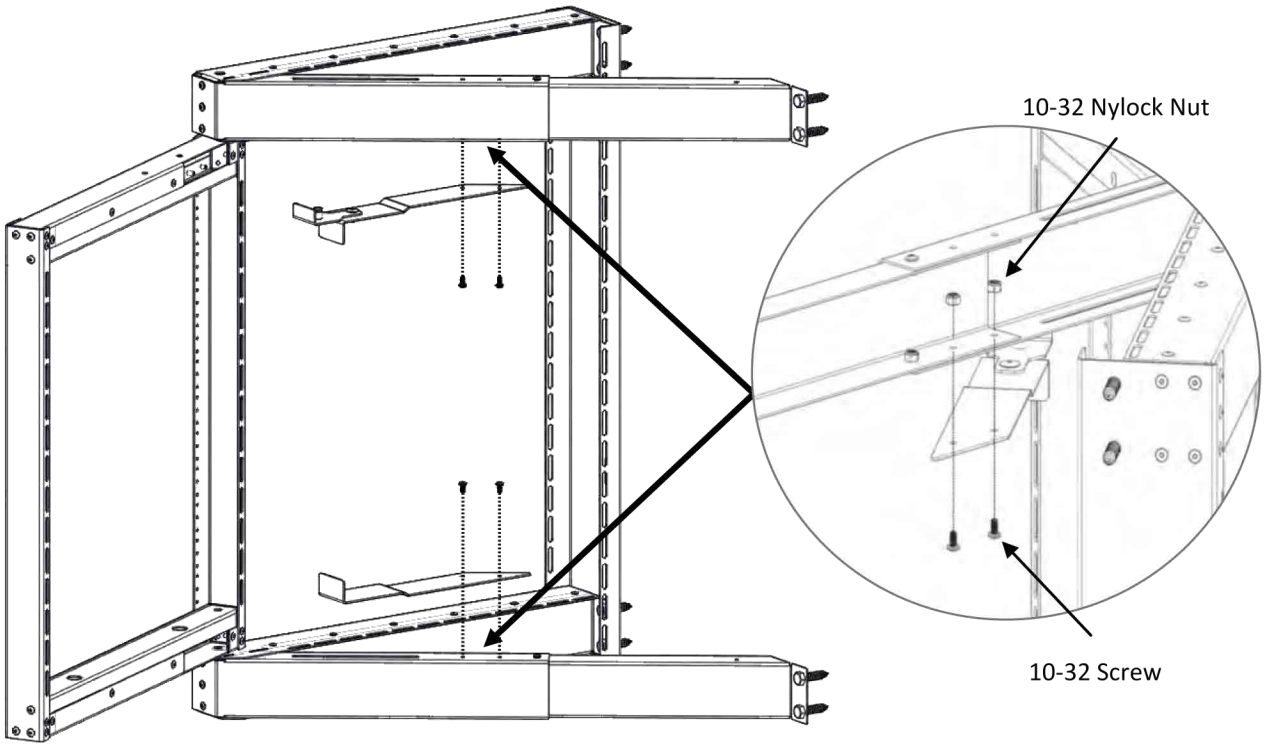

Step 7:

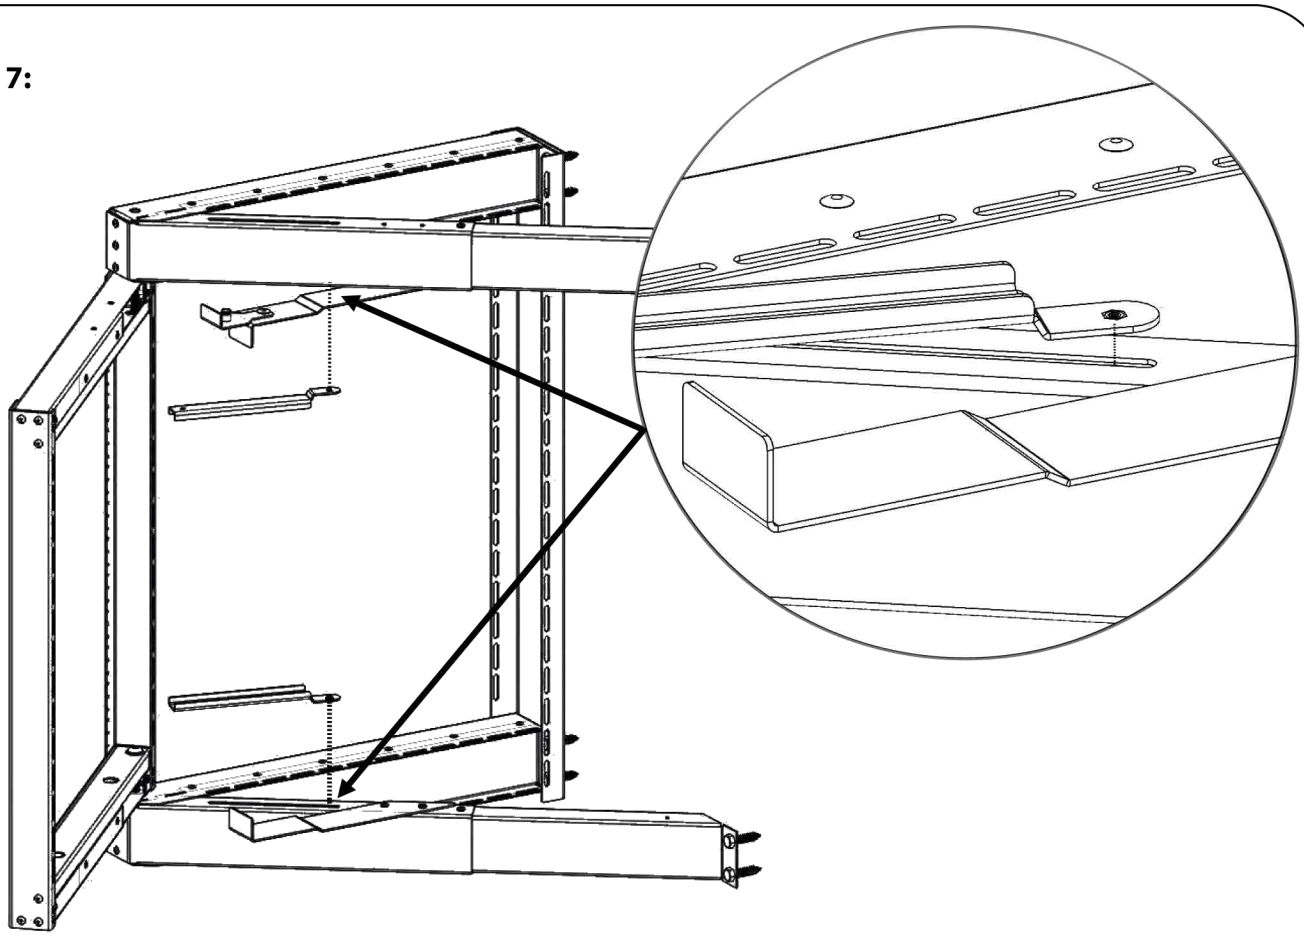

Step 8:

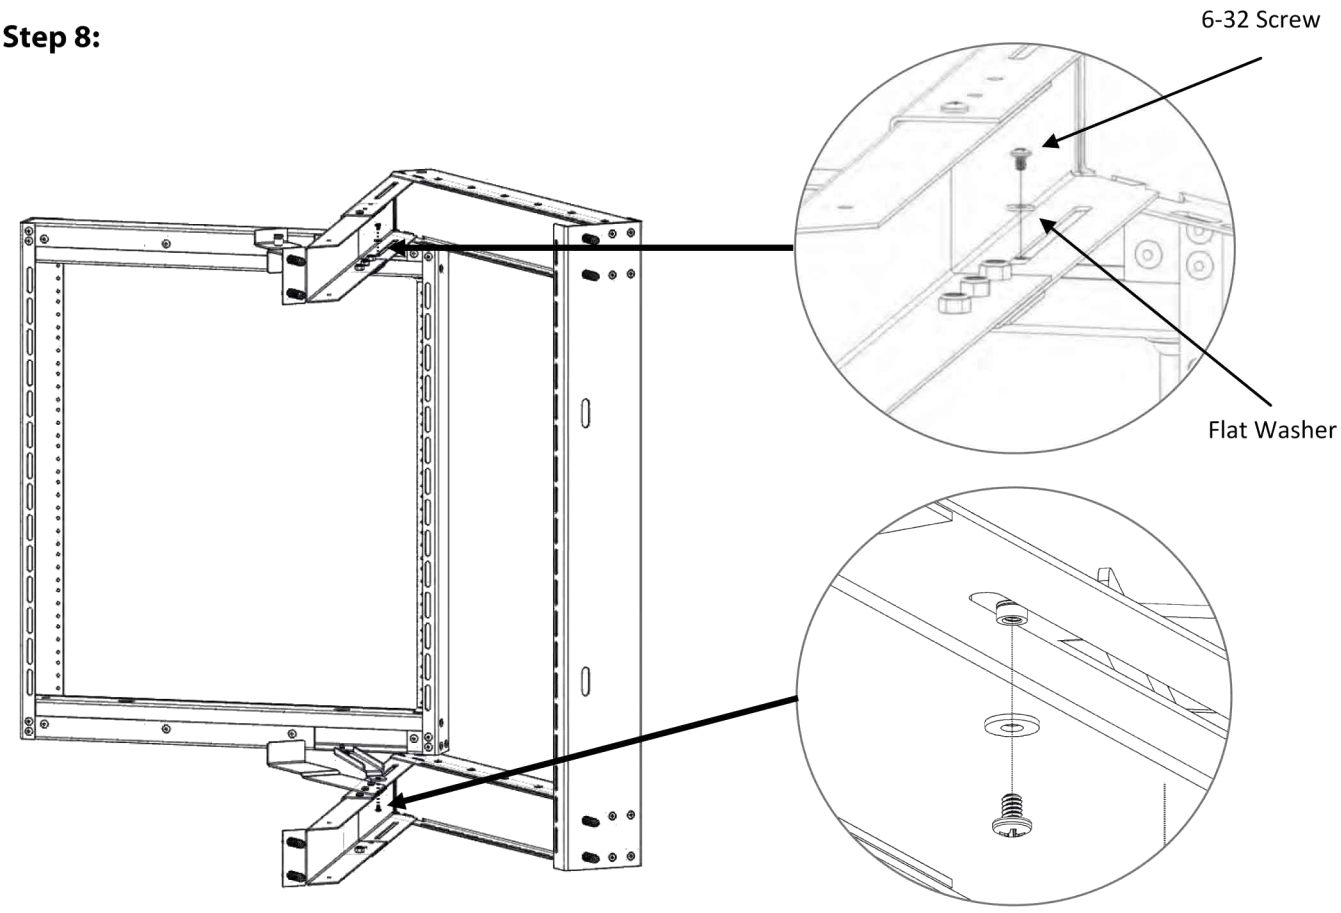

Step 9:

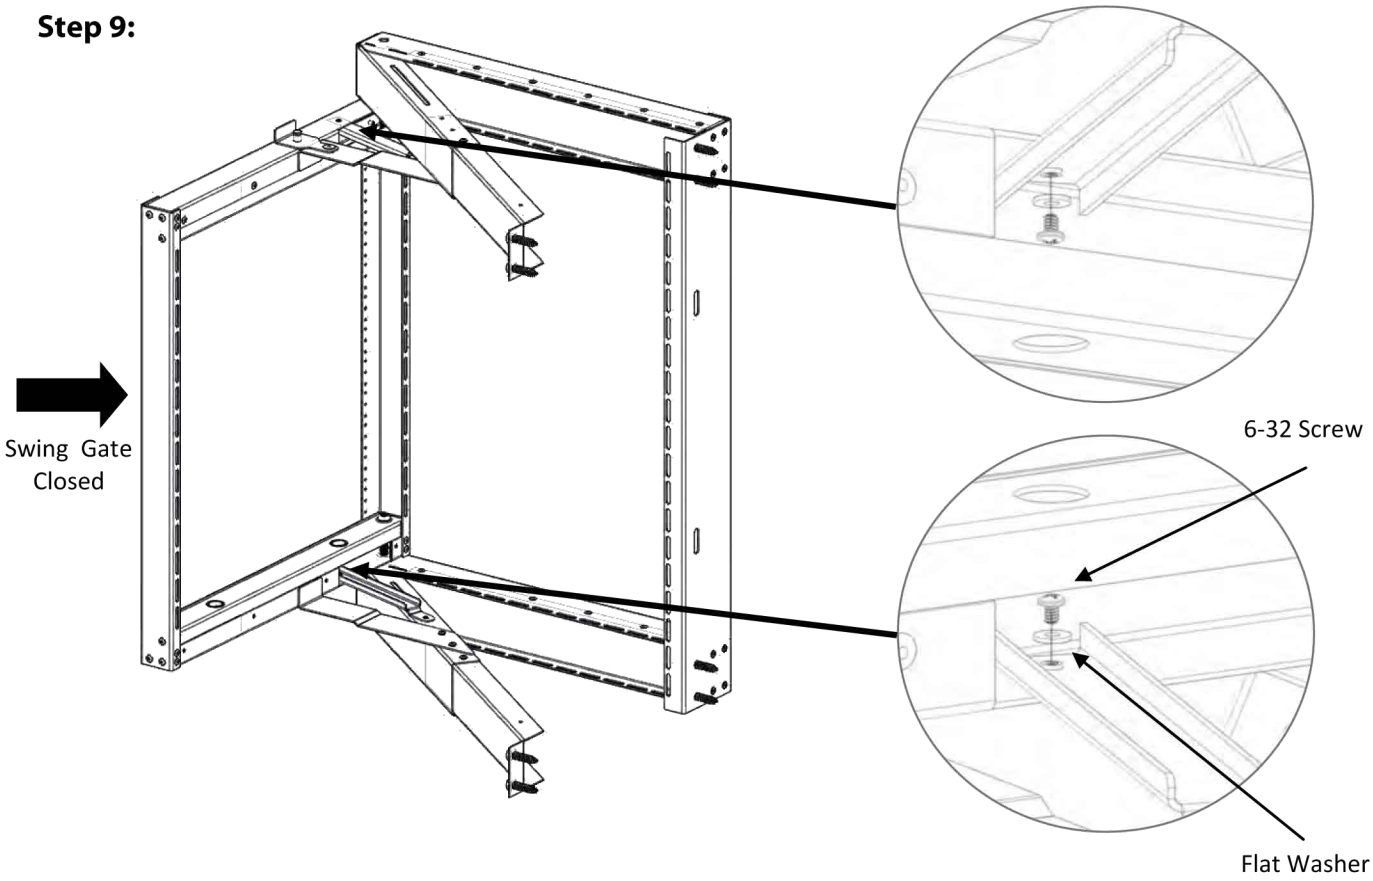

Step 10:

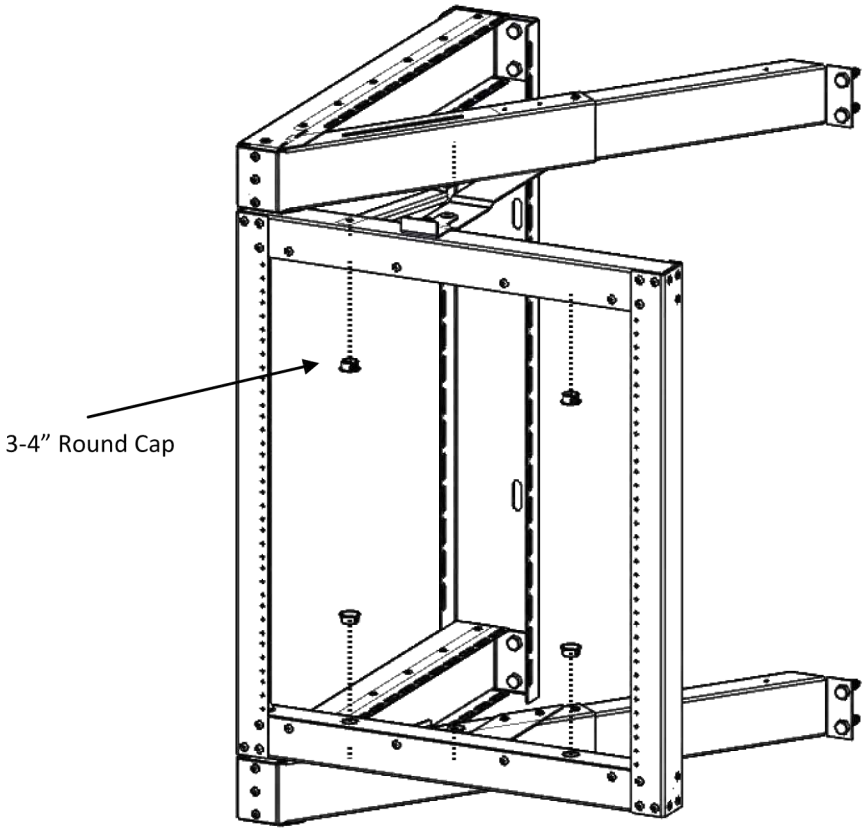

To latch and unlatch the gate:

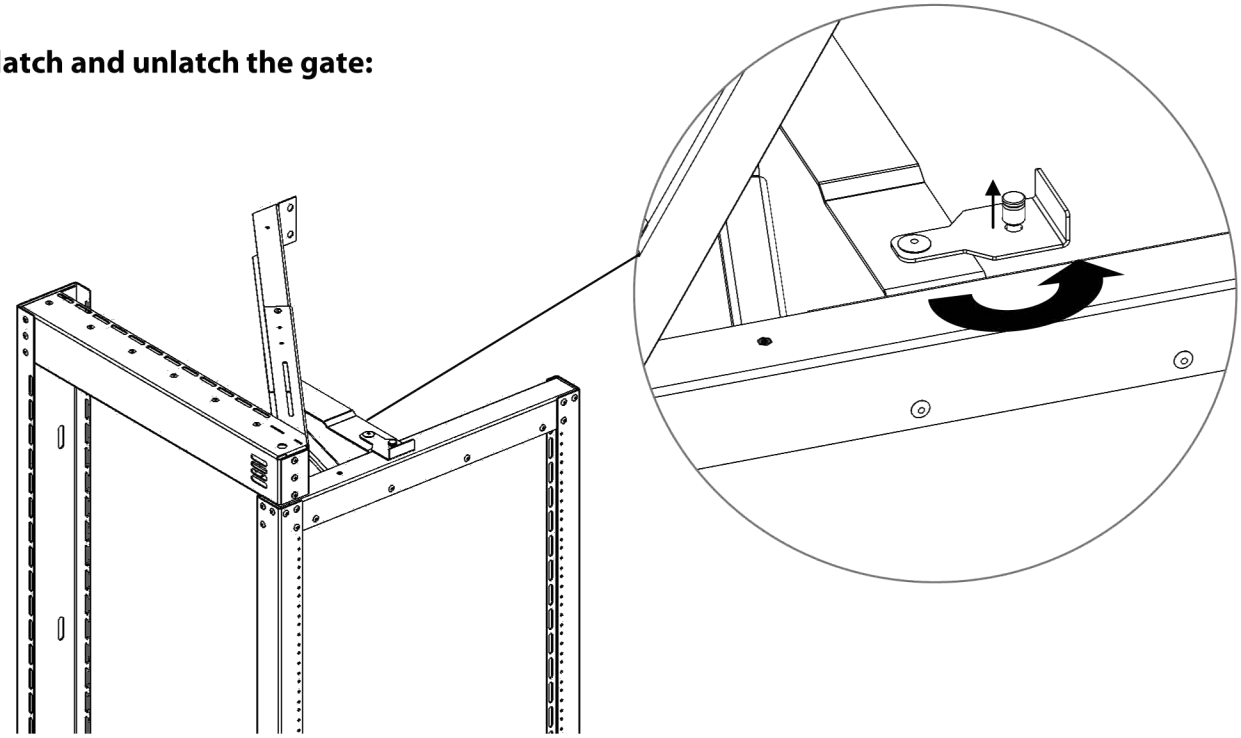

Distributed by : i-Tech Company LLC
TOLL FREE: (888) 483-2418 • EMAIL: info@iTechLCD.com • WEB: www.iTechLCD.com